

# D6

SECTIONAL VALVE



 hydro  
control

TECHNICAL CATALOGUE

A member of



 walvoil

FLUID POWER E|MOTION

**1<sup>st</sup> edition 8\*.0)**

---

*This catalogue shows the product in the most standard configurations.  
Please contact our Sales Dpt. for more detailed information or special requests.*

**WARNING!**

*All specifications of this catalogue refer to the standard product at this date.  
Walvoil, oriented to a continuous improvement, reserves the right to  
discontinue, modify or revise the specifications, without notice.*

**WALVOIL IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY AN  
INCORRECT USE OF THE PRODUCT.**



## Applications

The valve is available with manual, hydraulic remote, pneumatic, electrohydraulic and electropneumatic controls. Numerous configurations and solutions are possible. Working sections have auxiliary valves and a broad range of interchangeable spools. Special versions for LS variable pumps can be realised on request. Suitable for applications including Backhoe loaders, Wheel loaders, Backhoes, Compactor, Hook and Skip loaders, Drilling machines.

D6 has available:

Special inlet section for parallel valves connection (suitable for forest applications).





## QUICK REFERENCE GUIDE

GENERAL SPECIFICATION	D9	D3M	DVS10	D4	D6	D16	D12	DVS20	D20	D25	D40
Working sections number	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-12	1-10
<b>CIRCUIT</b>											
Parallel	•	•	•	•	•	•	•	•	•	•	•
Series	•	•	•	•	•	•	•	•	•	•	•
Tandem	•	•	•	•	•	•	•	•	•	•	•
Parallel circuit stroke (mm)	6	5	6	6	7	7	9,5	9,5	9,5	12	15
Series circuit stroke (mm)	6	5	6	6	5	7	6,5		6,5	8,5	
Float spool extra stroke (mm)	5	5	5	5,5	6	7	7	7	7	9,5	10
Spools pitch (mm)	31	38	35	40	46	46	56	56	64	75	91
<b>RATED FLOW</b>											
Max recommended flow rate (l/min)	35	55	45	80	100	150	180	250	250	380	700
Max recommended flow rate (GPM)	10	15	12	22	27	40	48	67	67	100	185
<b>RATED PRESSURE</b>											
Max working pressure (bar)	350	350	350	350	350	350	350	250	350	350	350
Max working pressure (PSI)	5000	5000	5000	5000	5000	5000	5000	4000	5000	5000	5000
<b>OPTION CHART</b>											
Direct acting pressure relief valve	•	•	•	•							
Pilot operated pressure relief valve	•		•	•	•	•	•	•	•	•	•
2 stage pilot operated relief valve	•		•	•	•	•	•	•	•	•	•
Externally piloted valve	•	•	•	•	•	•	•	•	•	•	•
Solenoid dump valve (12 Vdc)	•	•	•	•	•	•	•				
Solenoid dump valve (24 Vdc)	•	•	•	•	•	•	•				
Main anticavitation check valve	•		•	•	•	•	•	•	•	•	•
Clamping valve	•		•	•							
<b>SPOOL ACTUATION</b>											
Manual control	•	•	•	•	•	•	•	•	•	•	•
Without lever	•	•	•	•	•	•	•	•	•	•	•
90° joystick control	•		•	•	•	•					
Hydraulic control	•	•	•	•	•	•	•	•	•	•	•
Direct electric control (12-24 Vdc)	•		•								
<b>SPOOL RETURN ACTION</b>											
Spring return	•	•	•	•	•	•	•	•	•	•	•
Detent in A - in B - in A/B	•	•	•	•	•	•	•	•	•	•	•
Detent in 4 <sup>th</sup> position	•	•	•	•	•	•	•	•	•	•	•
Arrangement for dual control	•	•		•	•	•	•				
Hydraulic load limit	•	•		•	•	•					
Pneumatic control ON - OFF	•		•	•	•	•	•	•	•	•	•
Proportional pneumatic control	•		•	•	•	•	•	•	•	•	•
Electrical load limit	•	•		•	•	•					
Electrohydraulic control ON-OFF (12-24 Vdc)	•	•	•	•	•	•	•	•	•	•	•
Electrohydraulic control PROP. (12-24 Vdc)	•	•	•	•	•	•	•	•	•	•	•
Electropneumatic control (12-24 Vdc)	•	•	•	•	•	•	•				
<b>AUXILIARY VALVES</b>											
Antishock valve	•	•	•	•	•	•	•	•	•	•	•
Anticavitation valve	•	•	•	•	•	•	•	•	•	•	•
Combined valve	•	•	•		•	•	•		•	•	•
Pilot combined valve						•	•	•	•	•	•

## GENERAL INDEX

<b>4</b>	<b>General specifications</b> Standard working conditions Fluid options
<b>5</b>	<b>Order example</b> Standard thread Thread codes Tie-rod kit classification Painting
<b>7</b>	<b>Dimensions</b>
<b>8</b>	<b>Typical curves</b> Pressure drop (P - T) Pressure drop (P - A/B) Pressure drop (A/B - T) Direct relief valve curve Combined valve curve Antishock valve curve Anticavitation check valve curve
<b>10</b>	<b>Inlet Section</b> Order example Inlet side classification Valve identification Valve arrangement Inlet position and available thread type
<b>13</b>	<b>Working section</b> Order example Spool identification Spool actuation classification for manual control Spool actuation classification for hydraulic control Spool return action classification - Spring load values Work section identification Auxiliary valves identification
<b>28</b>	<b>Intermediate inlet section</b> Order example Intermediate inlet section classification Valve identification on intermediate inlet section Valve arrangement on intermediate inlet section Inlet position and available thread type
<b>31</b>	<b>Intermediate outlet section</b> Order example Intermediate outlet section classification Inlet position and available thread type (for BF intermediate) Inlet position and available thread type (for BG intermediate)
<b>35</b>	<b>Outlet section (version 1 outlet)</b> Order example
<b>35</b>	<b>Outlet section (HPCO version outlet)</b> Order example - HPCO version outlet Outlet with single tank classification Outlet with two tanks classification Carry-over connection (HPCO)
<b>39</b>	<b>D6 Spare parts list</b> Gasket kits
<b>43</b>	<b>Installation</b>
<b>45</b>	<b>General conditions and patents</b>



## GENERAL SPECIFICATIONS

## Standard working conditions

Description	Value
Ambient operating temperature range	-40°C / +60°C
Kinematic viscosity range	10 ÷ 300 cSt
Max contamination level	9 (NAS 1638) - 20/18/15 (ISO 4406:1999)
Recommended filtration level	b10 > 75 (ISO 16889:2008)
Internal filter (on electroproportional valves pilot line)	30 µm

All information and diagrams in this catalogue refer to a mineral base oil VG46 at 50°C temperature  
(32 cSt kinematic viscosity)

## Fluid options

Types of fluid (according to ISO 6743/4) Oil and Solutions	Temperature (°C)		Compatible gasket
	min	max	
Mineral Oil HL, HM (or HLP acc. to DIN 51524)	-25	+80	NBR
Oil in water emulsions HFA	+5	+55	NBR
Water in oil emulsions HFB	+5	+55	NBR
Polyglycol-based aqueous solution HFC	-10	+60	NBR

For special applications and different fluids, please call our Technical Department.

## ORDER EXAMPLE

D6/1: IR 009 150 A G05 | W001A H001 F001A RP G05 01 PA 100 05 PB | TJ A G05

TYPE: \_\_\_\_\_

D6: product type

/1: working section number

## 1) INLET ARRANGEMENT: (page 10)

IR 009 inlet side and valve type

150 setting (bar)

A G05 inlet position and available thread type

## 2) WORK SECTION ARRANGEMENT: (page 13)

W001A spool type

H001 spool actuation type

F001A spool return action type

RP G05 type and thread section

01 PA 100 auxiliary valve (port A)


05 PB auxiliary valve (port B)

## 3) OUTLET ARRANGEMENT: (page 35)

TJ outlet type

A G05 outlet position and available thread type

Ordering row 2 must be repeated for every work section

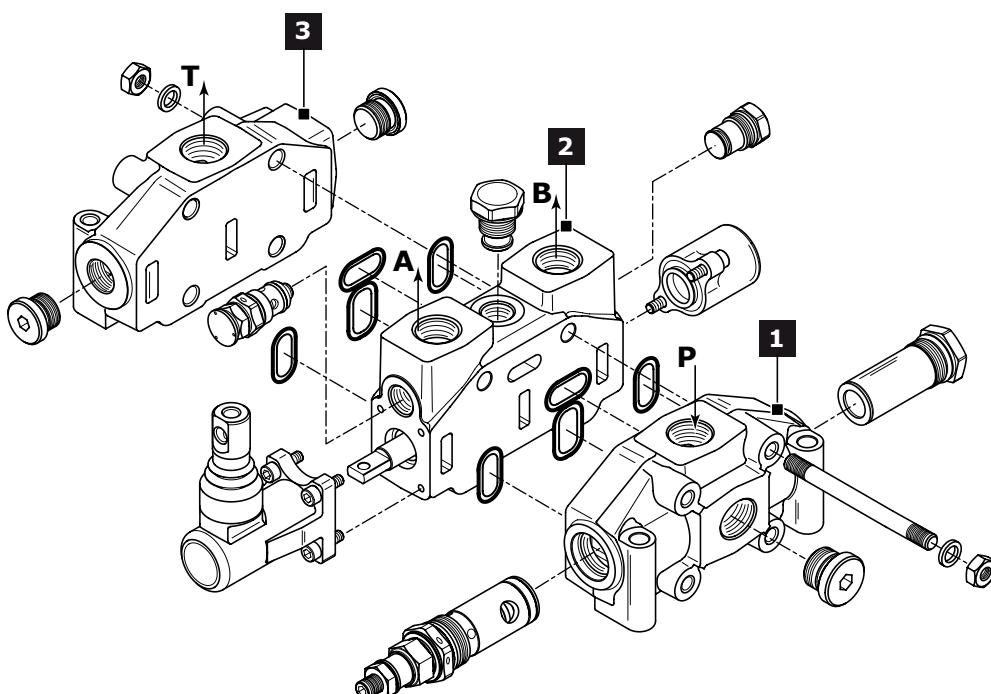


## Standard thread

The connection ports size is indicated by an ordering code common for all Hydrocontrol products. Following table shows all available connections; for ordering code refer to table on page 44.

Ports	BSP (ISO - 228)	Code	UN-UNF (ISO - 725)	Code
Inlet Port (P)	G 1/2 - G 3/4	G04 - G05	7/8" - 14UNF	U04
Ports (A - B)	G 1/2 - G 3/4	G04 - G05	7/8" - 14UNF	U04
Outlet (T) - Carry over (HPCO)	G 3/4 - G 1	G05 - G06	1"1/16 - 12 UNF	U05
Hydraulic Pilot	G 1/4	G02	9/16" - 18 UNF	U02
Pneumatic Pilot	G 1/8	-	NPTF 1/8-27	

**Tie-rod kit classification (appendix "A")**

Tie rod kit allows the correct assembly of sectional valves. Tie rod's length depends on the number of sections; each valve is assembled with tie rod kits including a tie rod, two nuts and two washers. D6 requires 4 tie-rod kits.

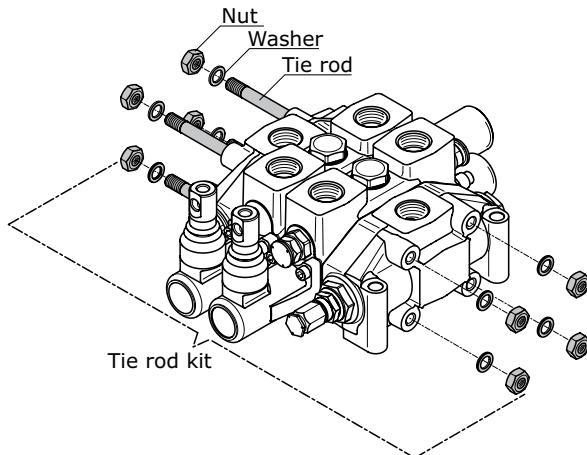

Tie rod kit	Order Code	Length (mm)	Clamping Torque (Nm)	Quantity
D6/1	300105001	180	50	4
D6/2	300105002	226		
D6/3	300105003	272		
D6/4	300105004	318		
D6/5	300105005	364		
D6/6	300105006	410		
D6/7	300105007	456		
D6/8	300105008	502		
D6/9	300105009	548		
D6/10	300105010	594		
D6/11	300105011	640		
D6/12	300105012	686		

**Painting**

On request, all Hydrocontrol valves can be delivered painted (RAL 9005 black primer).

**Order example of D6/1 painted:**


D6/1  
IR 009 150 A G05  
W001A H001 F001A RP G05 01 PA 100 05 PB  
TJ A G05  
**P006/1 N10**

The painting is indicated with the following value:

**P006 - /1 - N10**

Color black  
section number  
Painted

## DIMENSIONS

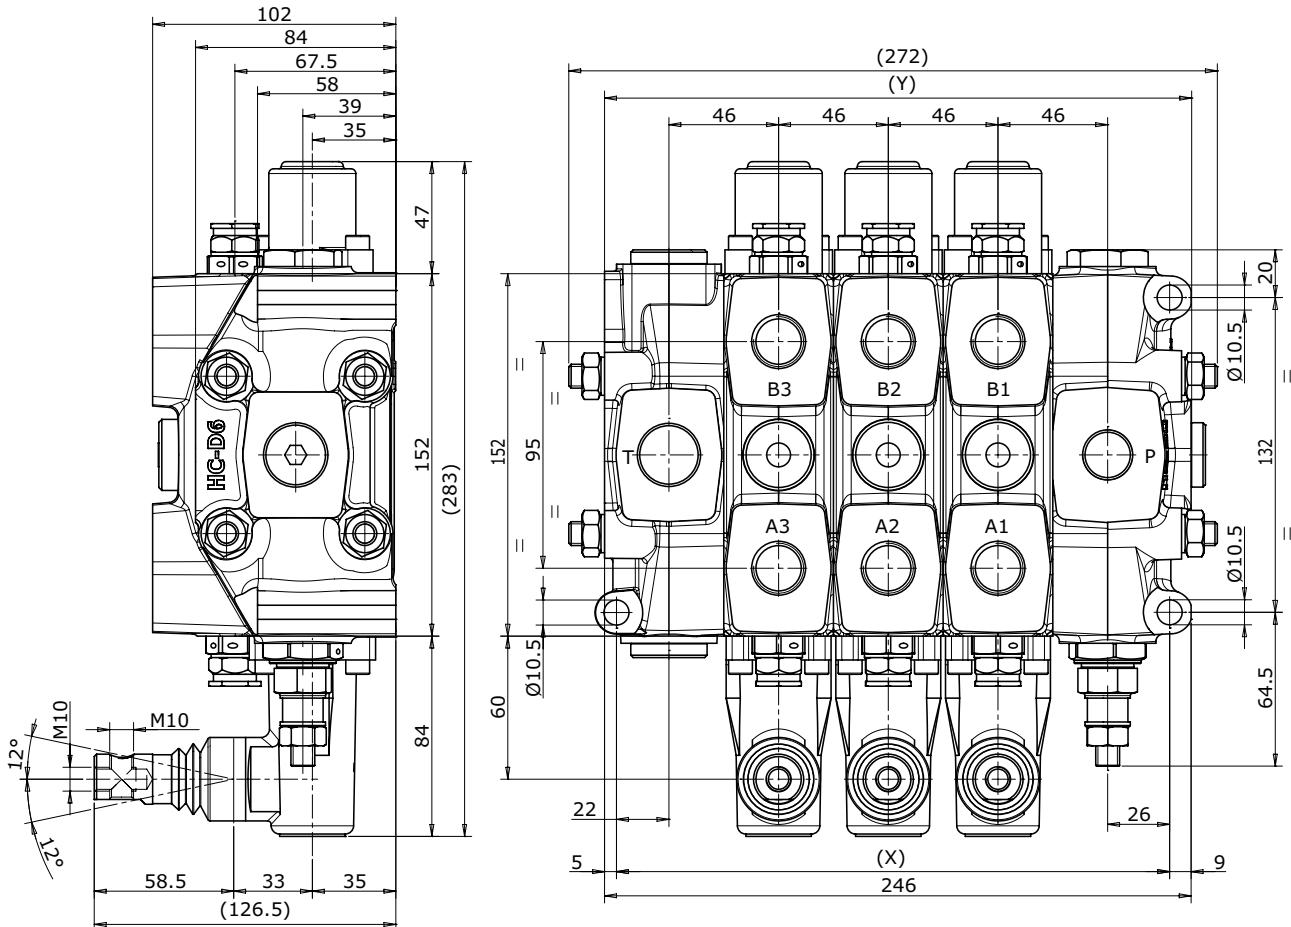



TYPE	/1	/2	/3	/4	/5	/6	/7	/8	/9	/10	/11	/12
X (mm)	140	186	232	278	324	370	416	462	508	554	600	646
Y (mm)	156	202	248	294	340	386	432	478	524	570	616	662
Weights (kg)	11,6	16,1	20,5	25	29,4	33,9	38,3	42,8	47,2	51,7	56,1	60,6





## TYPICAL CURVES

Indicated values have been tested with standard sectional valve and W001A spool.



## Pressure drop (P - T)

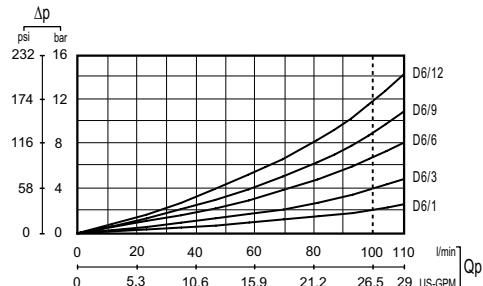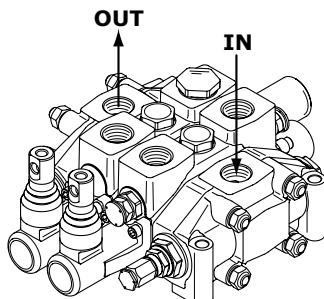

## Pressure drop (P - A/B)

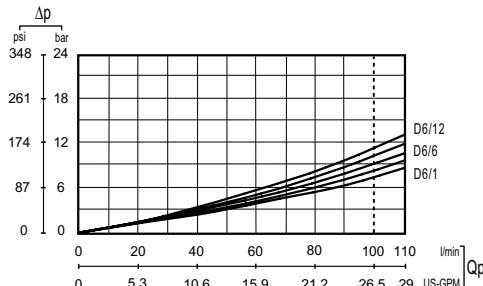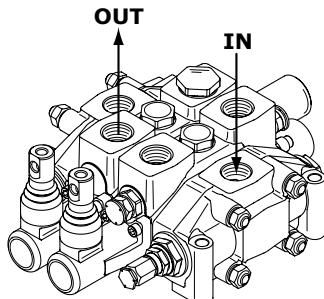


## Pressure drop (A/B - T)

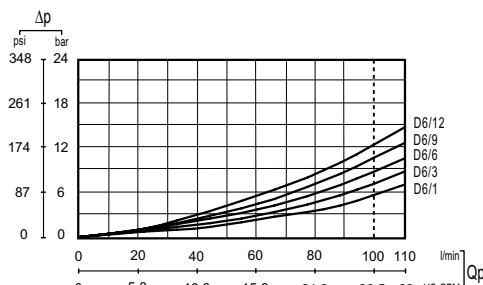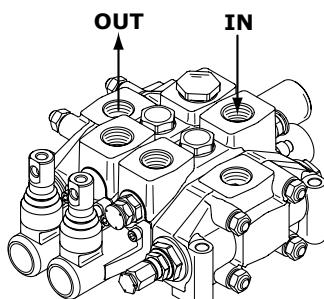

## Pilot operated relief valve curve

## Setting ranges

type	pressure (bar)
A	0 - 40
B	41 - 180
C	181 - 250
D	251 - 350

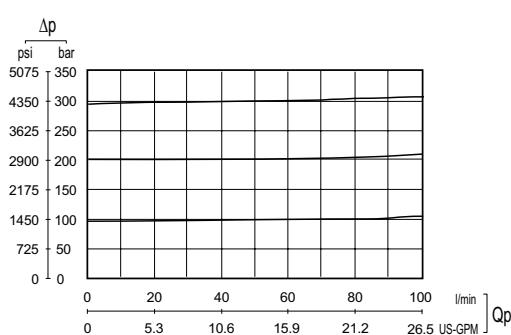


## TYPICAL CURVES

Indicated values have been tested with standard sectional valve and W001A spool.


### Antishock valve curve

Setting ranges		
type	pressure (bar)	
	at full flow	at min. flow
A	30 - 110	20-A / 70-A
B	111 - 180	71-A / 150-A
C	181 - 290	151-A / 270-A
D	291 - 350	271-A / 350-A

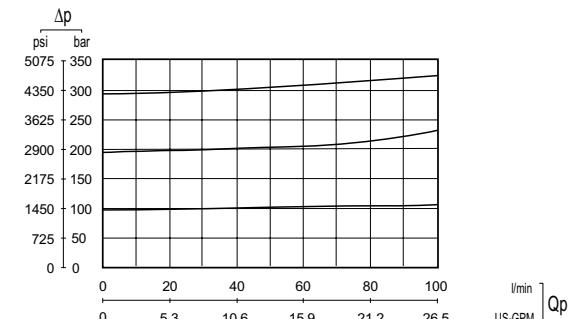


### Compined valve curve


Setting ranges		
type	pressure (bar)	
	at full flow	at min. flow
A	100 - 200	20-A / 80-A
B	201 - 280	81-A / 250-A
C	281 - 350	251-A / 350-A

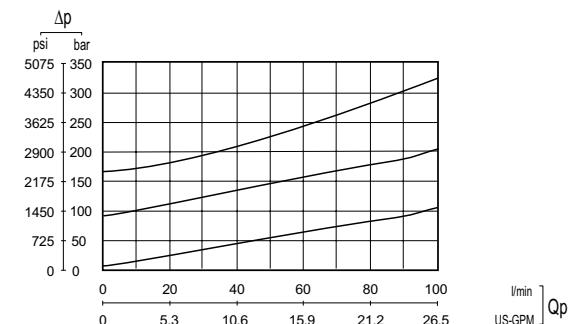

### Main anticavitation check valve curve

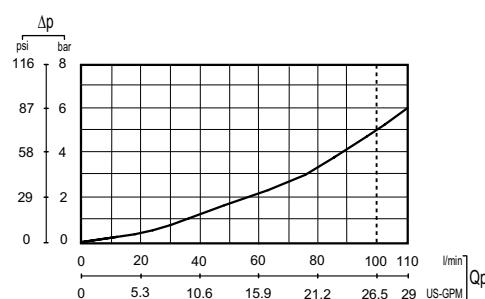

### Anticavitation check valve curve

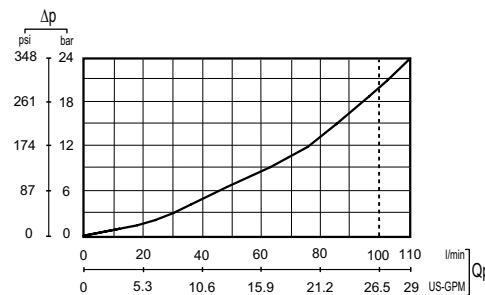




## INLET SECTION

Order example


		IR	009	150	A G05
1.	<b>IR</b>	inlet side classification			
1.	<b>009</b>	valve arrangement			
1.	<b>150</b>	setting (bar)			
2.	<b>A G05</b>	inlet position and available thread type			

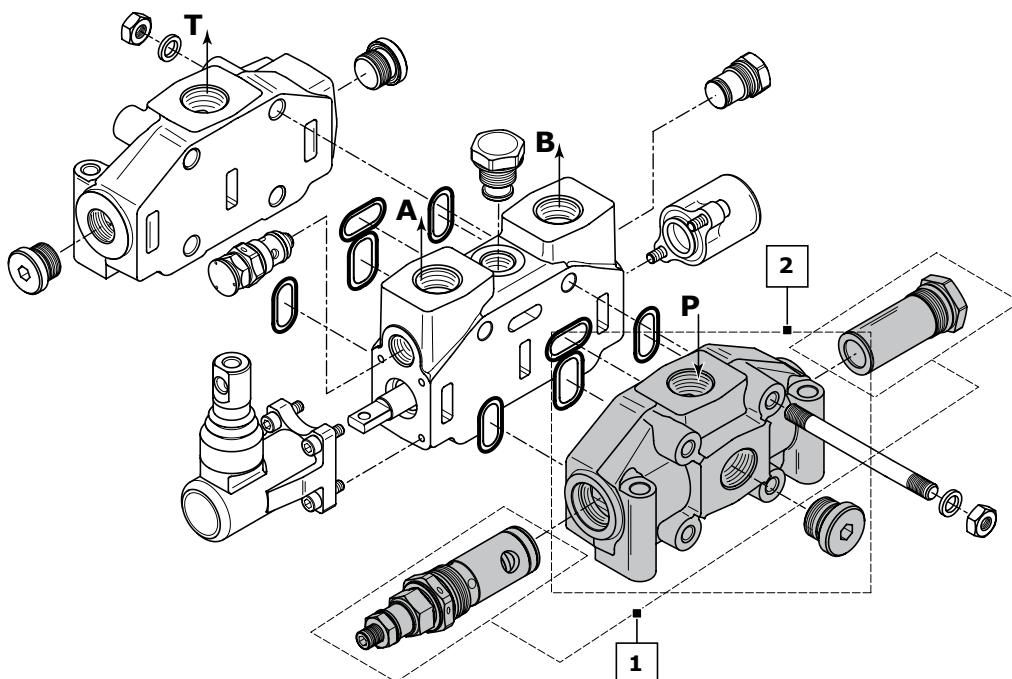

Rif.	Code	Description	Page
-	<b>IR</b>	Sectional valve with right inlet section	
	<b>IL</b>	Sectional valve with left inlet section	<b>11</b>
1	<b>009</b> <b>010</b> <b>012</b> <b>013</b> <b>019</b> <b>020</b>	Pilot operated pressure relief valve Pilot operated pressure relief valve and Main anticavitation check valve Pilot operated pressure relief valve and Solenoid dump valve 12 Vdc Pilot operated pressure relief valve and Solenoid dump valve 24 Vdc Without valves Main anticavitation check valve	<b>11</b>
2	<b>A G05</b> <b>C G05</b> <b>A U04</b> <b>C U04</b>	Upper inlet (thread G 3/4) Central side inlet (thread G 3/4) Upper inlet (thread 7/8" - 14 UNF) Central side inlet (thread 7/8" - 14 UNF)	<b>12</b>

**NOTE:** when ordering a relief valve it is necessary to specify factory setting (example 150).


### Inlet side classifications

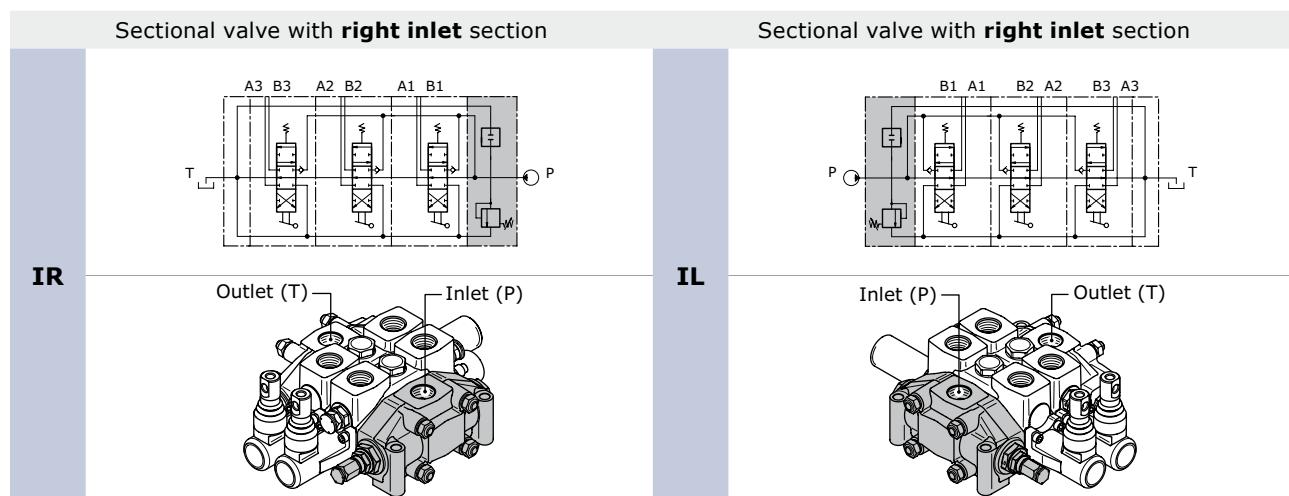

### Valve identification

type	schema	layout	description	type	schema	layout	description
<b>2</b>			Pilot operated pressure relief valve	<b>6</b>			Externally piloted valve
<b>3</b>			Relief valve plugged	<b>7</b>			Solenoid dump valve 12 Vdc
<b>4</b>			Main anticavitation check valve	<b>8</b>			Solenoid dump valve 24 Vdc
<b>5</b>			2 stage pilot operated relief valve	<b>11</b>			Plug with pressure-gauge connection

### Valve arrangement

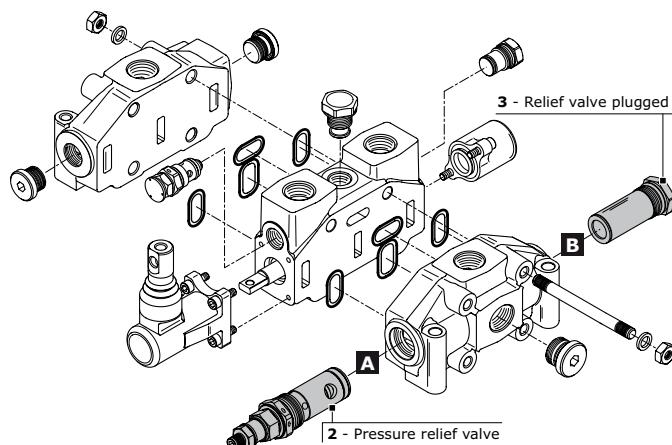

#### Combination valve example: 009 = 2A - 3B

**009** Combination valve  
**2A** Pressure relief valve in port A  
**3B** Relief valve plugged in port B

#### The code identifies:

with a number, the type of valve; with a letter its position on the inlet section.

(A) = spool action side  
(B) = spool return action side

**NOTE:** when ordering a main relief valve it is necessary to specify setting



VALVE COMBINATION INLET SECTION	Valve type on port B							
	2	3	4	5	6	7	8	11
Valve type on port A	2	009	010		011	012	013	016
	3	018	019	020	021	022	023	024
	4	029	030		031	032	033	034
	5		038					
	6	047	048					
	7	054	055					
	8	061	062					
	11	085						

**NOTE:** Valve combinations 021, and 038 requires double setting (see example).

Order example for inlet section: IR 038 200\*280 A G05

038  
200\*380

valve combination \_\_\_\_\_  
double range setting (bar) \_\_\_\_\_


#### Inlet position and available thread type

Inlet combination and thread available		
A G04		Inlet (P)
A G05		Upper inlet (P)
A U04		
C G04		Inlet (P)
C G05		Central side inlet (P)
C U04		Inlet (P)
B G04		Inlet (P) Inlet (P1)
B G05		Upper inlet (P) (P1) with pressure-gauge connection G 1/4
B U04		Inlet (P) Inlet (P1)
D G04		Inlet (P) Inlet (P1)
D G05		Central side inlet (P) (P1) with pressure-gauge connection G 1/4
D U04		Inlet (P) Inlet (P1)

## WORKING SECTION

Order example:

	<b>W001A</b>	<b>H001</b>	<b>F001A</b>	<b>RP G05</b>	<b>01 PA 100</b>	<b>05 PB</b>
1.	<b>W001A</b>	spool type				
2.	<b>H001</b>	spool actuation type				
3.	<b>F001A</b>	spool return action type				
4.	<b>RP G05</b>	section and thread type				
5.	<b>01 PA 100</b>	auxiliaty valve (port A - handle side)				
6.	<b>05 PB</b>	auxiliaty valve (port B - cap side)				

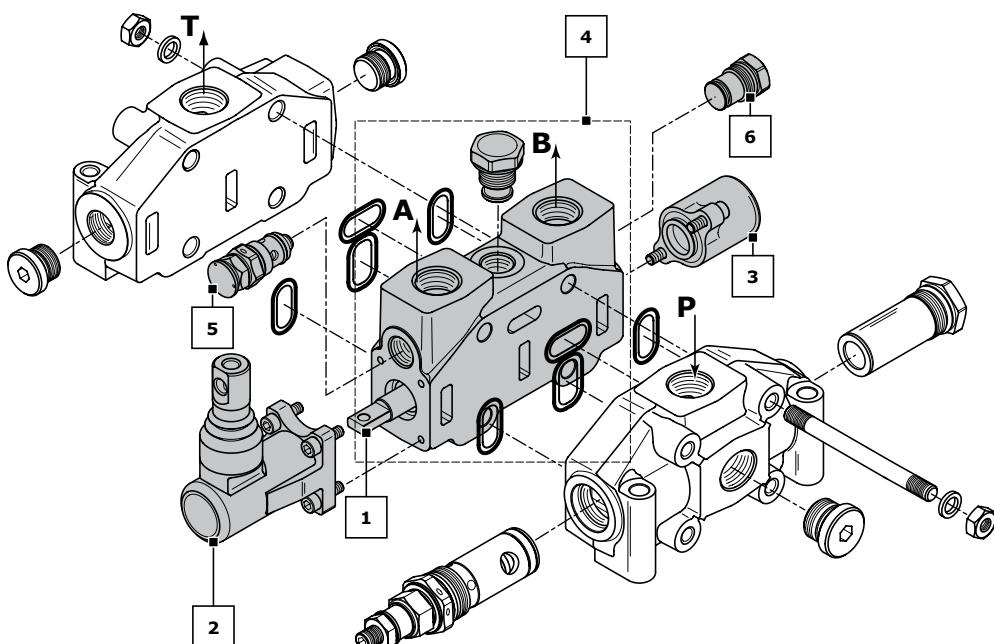

Rif.	Code	Description	Page
1	<b>W001</b> <b>W002</b>	3 positions double-acting 3 positions double-acting A-B to tank	<b>14</b>
2	<b>H001</b> <b>H005</b>	Protected lever hydraulic actuation	<b>16</b>
3	<b>F001A</b> <b>F002A</b>	3 positions spring-centred spool (spring A) 3 positions spring-centred spool detent in A and B (spring A)	<b>18</b>
4	<b>RP G05</b> <b>RP U04</b> <b>RS G05</b> <b>RS U04</b>	Parallel circuit (G 3/4) Parallel circuit (7/8"-14 UNF) Series circuit (G 3/4) Series circuit (7/8"-14 UNF)	<b>26</b>
5	<b>01 PA 100</b> <b>05 PA</b>	Antishock valve (port A) Prearrangement for auxiliary valve (port A)	
6	<b>01 PB 100</b> <b>05 PB</b>	Antishock valve (port B) Prearrangement for auxiliary valve (port B)	<b>27</b>

**NOTE:** (\*) Leave out the spool return action code when choosing H005.

Sections designed to house auxiliary valve option require double choice on work ports A and B.

Always indicate setting value when using antishock and combined valve: **01 PA (100) - 03 PA (100)**





## Spool identification

order example of spool: **W001 A J10**

<b>W001</b>	spool schema	3 positions double-acting	
<b>A</b>	spool type	standard spool	
<b>J10</b>	restricted service ports	restriction on diameter (0,10 mm in A and B)	

<b>W001</b>	3 positions double-acting	
<b>W002</b>	3 positions double-acting A and B to tank	
<b>W003</b>	3 positions double-acting A to tank B blocked	
<b>W004</b>	3 positions double-acting A blocked B to tank	
<b>W005</b>	3 positions single - acting on A	
<b>W006</b>	3 positions single - acting on B	
<b>W009</b>	3 positions double-acting with anticavitation valves	
<b>W010</b>	3 positions double-acting switch port closed (A - B blocked)	
<b>W011</b>	3 positions double-acting switch port closed (A - B to tank)	
<b>W012</b>	4 positions double-acting with float in the 4 <sup>th</sup> position	
<b>W013</b>	3 positions double-acting regenerative	
<b>W015</b>	3 positions double-acting series	
<b>W016</b>	3 positions double-acting series A and B to tank	

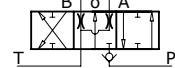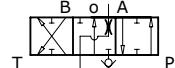code	circuit	spools with restricted service ports		
		restriction on diameter (mm)	section (mm <sup>2</sup> )	hydraulic schema
J10	A-B IN T	0,10	2,98	
K10	A IN T	0,10	2,98	
Y10	B IN T	0,10	2,98	

CODE	spool type available	
	STANDARD A	METERED B
W001	W001A	W001B
W002	W002A	W002B
W003	W003A	W003B
W004	W004A	W004B
W005	W005A	W005B
W006	W006A	W006B
W009	W009A	W009B
W010	W010A	
W011	W011A	
W012	W012A	
W013	W013A	
W015	W015A	
W016	W016A	

## NOTE:

- W012, W013, spools need a special machining on the valve body.
- W015, W016, spools need RS type body.
- Float spool (W012) need special detent kit (F005).
- Regenerative spool (W013) need special return spring kits.
- Different spools are available on request.

Please contact our Sales department for more information.



## Spool actuation classification for manual control


code	description	dimensions	configuration
H001	Protected lever		
H002	Protected lever rotated 180°		
H004	Control without lever		
H101	Unprotected lever		
H102	Unprotected lever rotated 180°		

## Spool actuation classification for Hydraulic control

code	description	dimensions	configuration
H005 <small>leave out the spool return action code</small>	Hydraulic actuation with side ports  BSP ports = G 1/4 UNF ports = 9/16-18 UNF		

## Hydraulic pilot control curve

The diagram shows the spool stroke as a function of the pressure operating.

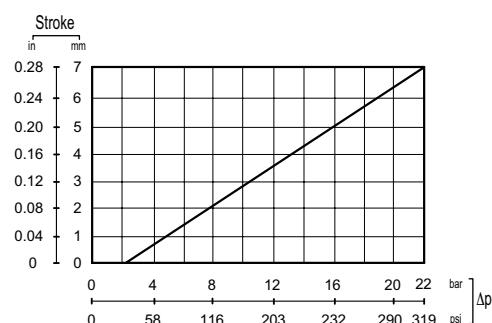

### Joystick control classification





The configuration of joystick control interests always two working sections with relative four ports:

**A1 - B1 - A2 - B2.**

For convention:

- section 1 is the first invested from the flow of the oil: it depends from the right or left inlet of the control valve
- Port A = spool action side
- Port B = spool return action side

The position of the fulcrum is identified by a code and stands in four configurations as shown in the following table:

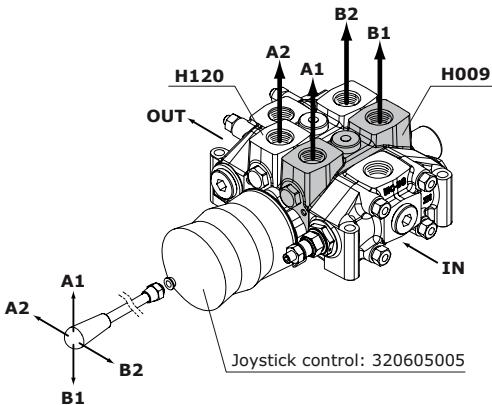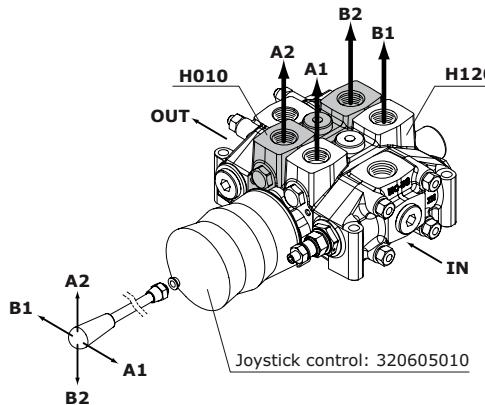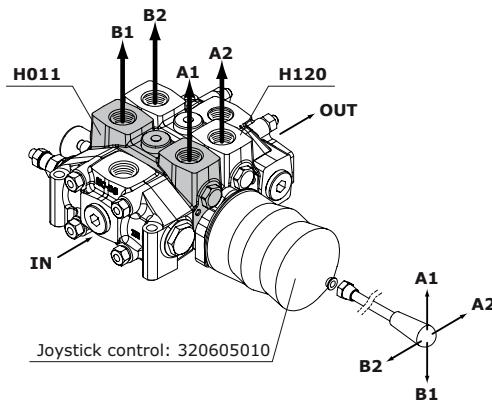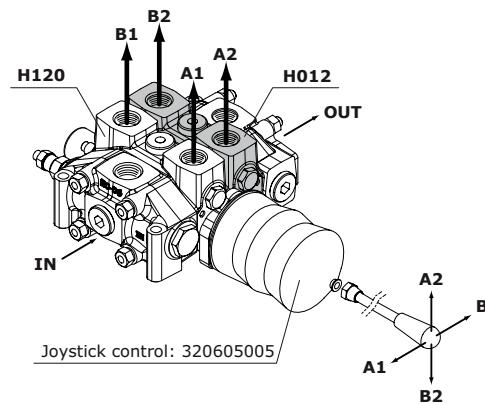
Fulcrum Inlet side	<b>FULCRUM</b> <b>1<sup>st</sup> section</b>	<b>FULCRUM</b> <b>2<sup>nd</sup> section</b>
<b>RIGHT INLET</b>	<b>H009</b>  Right side inlet fulcrum on 1 <sup>st</sup> section (compulsory code for second section: H120)	<b>H010</b>  Right side inlet fulcrum on 2 <sup>nd</sup> section (compulsory code for first section: H120)
	 <p>Joystick control: 320605005</p>	 <p>Joystick control: 320605010</p>
<b>LEFT INLET</b>	<b>H011</b>  Left side inlet fulcrum on 1 <sup>st</sup> section (compulsory code for second section: H120)	<b>H012</b>  Left side inlet fulcrum on 2 <sup>nd</sup> section (compulsory code for first section: H120)
	 <p>Joystick control: 320605010</p>	 <p>Joystick control: 320605005</p>

The second section concerned the configuration of the joystick control is always identified with code H120.  
Lever has to be ordered separately.

**Spool return action classification - Springs load values**

Spool return kits have three different spring types; following the codes depending on spring loads.

Spring type			
Code	A (standard spring)	B (soft spring)	C (heavy spring)
Preloading	137.3 N	109.8 N	168.7 N
End of stroke	176.6 N	141.2 N	259 N
Spool return action identification example			
Code	F001A	F001B	F001C

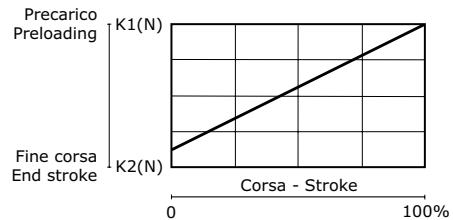**Spool return action classification**

code	description	schema	dimensions	configuration
F001A				
F001B	3 positions spring-centred spool	W[B 0 A]—		
F001C				
F002A	3 positions spring-centred spool detent in A and B	BA 0 W[B 0 A]—		
F003A	3 positions spring-centred spool detent in A	A 0 W[B 0 A]—		
F004A	3 positions spring-centred spool detent in B	B 0 W[B 0 A]—		
F005A	4 positions spring-centred spool detent in 4 <sup>th</sup> position (only for W012 spool)	4 0 W[B 0 A 4]—		

code	description	schema	dimensions	configuration
<b>F009A</b>				
<b>F009B</b>	2 positions in A spring-centred spool	-W[0A]-		
<b>F009C</b>				
<b>F010A</b>				
<b>F010B</b>	2 positions in B spring-centred spool	-W[B0]-		
<b>F010C</b>				
<b>F011A</b>				
<b>F011B</b>	2 positions detent in A spring-centred spool	A [T]W[0A] 0		
<b>F011C</b>				
<b>F012A</b>				
<b>F012B</b>	2 positions detent in B spring-centred spool	B [T]W[B0] 0		
<b>F012C</b>				
<b>F013A</b>				
<b>F013B</b>	3 positions spring-centred spool prearrangement dual command	-[ ]W[B0A]-		
<b>F013C</b>				

#### Load limit classification

code	description	schema	dimensions	configuration
<b>F024A</b>	Load limit in A and B	X X A1 B1 [B0A]-		
<b>F024C</b>				
<b>F025A</b>	Load limit in A and B rotated 180°	X A1 B1 [B0A]-	40 73.5 G1/4 51 139.5	
<b>F025C</b>				
<b>F026A</b>	Load limit in A	X B1 [B0A]-	71 G1/4 51 97	
<b>F026C</b>				
<b>F027A</b>	Load limit in A	X B1 [B0A]-	71 G1/4 51 97	
<b>F027C</b>	rotated 180°			
<b>F028A</b>	Load limit in B	X B1 [B0A]-	73.5 G1/4 51 110	
<b>F028C</b>				
<b>F029A</b>	Load limit in B	X B1 [B0A]-	73.5 G1/4 51 110	
<b>F029C</b>	rotated 180°			

**NOTE:** on request is available the load limit with dual control; for more informations please contact our Commercial Dept.




## Pneumatic control classification

code	description	schema	dimensions	configuration
F020A	Pneumatic control ON-OFF			
F021A	Pneumatic control ON-OFF rotated 180°			
F022A	Proportional Pneumatic control			
F023A	Proportional Pneumatic control rotated 180°			
F135A	Pneumatic control ON-OFF			
F136A	Pneumatic control ON-OFF rotated 180°			
F126A	Proportional Pneumatic control			
F127A	Proportional Pneumatic control rotated 180°			

## Proportional pneumatic control curve

The diagram shows the spool stroke as a function of the pneumatic pressure operating.

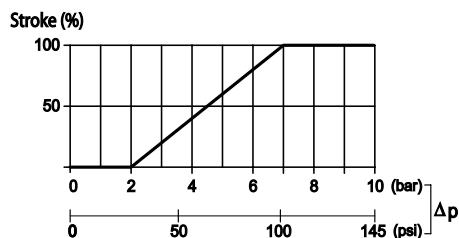

## Electropneumatic control classification

code	description	dimensions	configuration
F0620	3 positions electropneumatic control ON-OFF (12 vdc) 7 W - 0,58 A	Minimum working pressure 5 bar	
F0630	3 positions electropneumatic control ON-OFF (24 vdc) 7 W - 0,29 A		

### Control tie rod assembly for electropneumatic control

The length of the control tie rod, will change depending on the section numbers; in this way it will be easy to install in the right way the sections and avoid any misassembly. Each kit is composed by 1 tie rod and 2 plugs.

**NOTE:** the control tie rod kit has always to be ordered separately.

#### Order code for control tie rod (BSP):

**320105013** = control tie rod /1  
**320105014** = control tie rod /2  
**320105015** = control tie rod /3  
**320105016** = control tie rod /4  
**320105017** = control tie rod /5  
**320105018** = control tie rod /6  
**320105019** = control tie rod /7  
**320105020** = control tie rod /8


#### Order code for control tie rod (UNF):

**320105037** = control tie rod /1  
**320105038** = control tie rod /2  
**320105039** = control tie rod /3  
**320105040** = control tie rod /4  
**320105041** = control tie rod /5  
**320105042** = control tie rod /6  
**320105043** = control tie rod /7  
**320105044** = control tie rod /8

### Electrical load limit classification

Spool position sensor			
Power supply	Contacts capacity	Protection degree	temperature range
12 vdc	3 A	IP 65	da -25°C a +90°C
24 vdc	1,5 A		

### Operational diagram

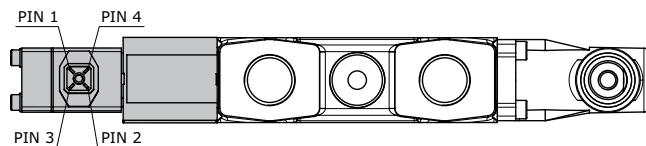


**CONTROL in A e B** = connect PIN 1 - 4 and 2 - 3

**CONTROL in A** = connect PIN2 - 3



**CONTROL in B** = connect PIN 1 - 4

### Wiring diagram

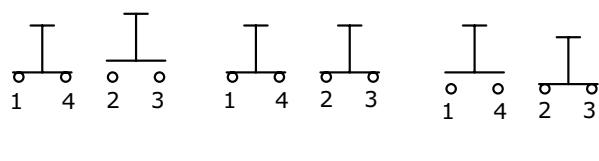

In case of inductive loads it is advisable to connect the terminals of the workport (solenoid) to a 200 VDC - 3A diode.

controllo utilizzo A      neutro in = 0      controllo utilizzo B

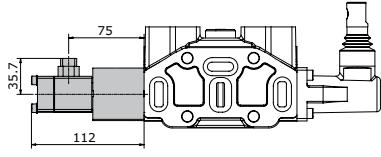
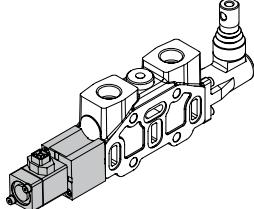
code	description	dimensions	configuration
<b>F0360</b>	Electrical load limit (normally closed contacts)		
<b>F0370</b>	Electrical load limit rotated 180° (normally closed contacts)		
<b>F0450</b>	Electrical load limit (normally open contacts)		
<b>F0460</b>	Electrical load limit rotated 180° (normally open contacts)		

**NOTE:** a HIRSCHMANN female connector, type G4 W1F, is available on request (code 413000045, to be ordered separately).



## Electrohydraulic control specifications

Operating temperature range	-20°C / +80°C
Max inlet pressure	350 bar
Reduced pressure	16 bar
Back pressure on (T)	3 bar
Filtering degree	25 µ assoluti
Racommended pilot pipe size	Ø 6 mm - G 1/4

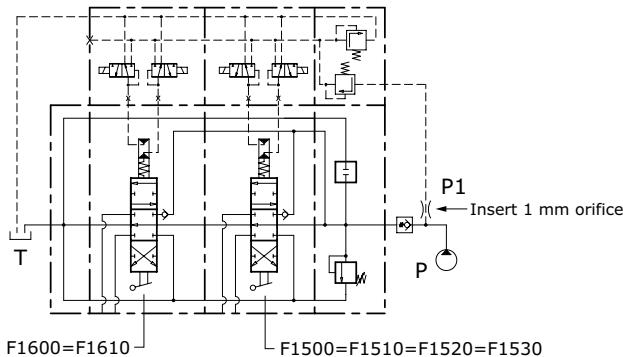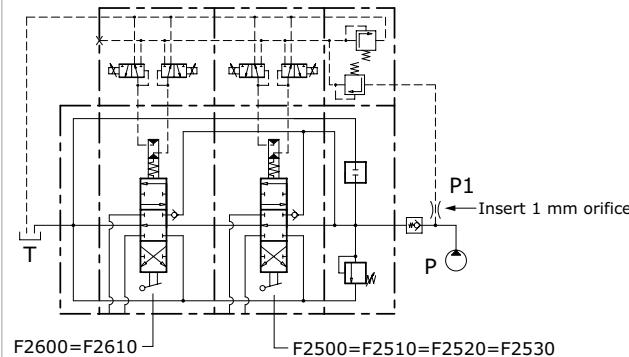Electrohydraulic ON-OFF control  
with fixed pressure reducing valveElectrohydraulic PROPORTIONAL control  
with fixed pressure reducing valve

Proportional control kit, mechanically retrooperated, allows the maximum precision of positioning, limiting the hysteresis. The control is operated with PWM control of the current. PWM frequency suggest: 60-80 Hz

## regulation currents



Nominal voltage (V)	Resistance R <sub>20</sub> (Ohm)	Current min (A)	Current max (A)
12 vdc	3,7	0,9	1,7
24 vdc	15,5	0,45	0,85

## Electrohydraulic control classification

code	description	dimensions	configuration
<b>F1600</b>	3 positions electrohydraulic control ON - OFF 12 Vdc		
<b>F1610</b>	3 positions electrohydraulic control ON - OFF 24 Vdc		
<b>F2600</b>	3 positions electrohydraulic control PROPORTIONAL 12 Vdc		
<b>F2610</b>	3 positions electrohydraulic control PROPORTIONAL 24 Vdc		

Electrohydraulic ON-OFF control is stackable with electrohydraulic PROPORTIONAL control (F2600 = F2610). Control kit already includes orifice to make spool displacement more gradual.

**Electrohydraulic control with fixed pressure reducing valve classification**

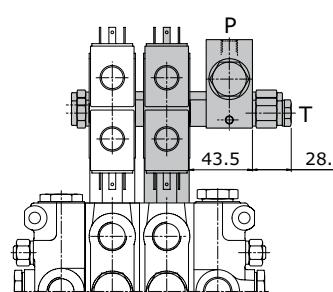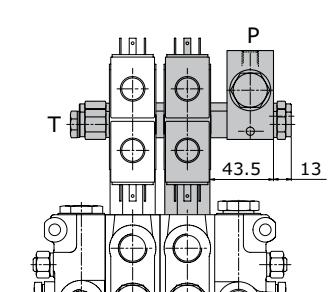code	description	configuration
<b>F1500</b>	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P - T inlet side (12 vdc)	 Port BSP (P - T) = G 1/4 Port UNF (P - T) = 9/16"18 UNF
<b>F1510</b>	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P - T inlet side (24 vdc)	
<b>F2500</b>	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P - T inlet side (12 vdc)	
<b>F2510</b>	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P - T inlet side (24 vdc)	
<b>F1520</b>	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P inlet - T outlet (12 vdc)	 Port BSP (P - T) = G 1/4 Port UNF (P - T) = 9/16"18 UNF
<b>F1530</b>	Electrohydraulic control ON - OFF (fixed pressure reducing valve) P inlet - T outlet (24 vdc)	
<b>F2520</b>	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P inlet - T outlet (12 vdc)	
<b>F2530</b>	Electrohydraulic control PROPORTIONAL (fixed pressure reducing valve) P inlet - T outlet (24 vdc)	

**Control tie rod assembly**

The length of the control tie rod, will change depending on the section numbers; in this way it will be easy to install in the right way the sections and avoid any misassembly. Each kit is composed by 2 tie rods, 2 plugs, 2 connection ports and spacers according to the section number.


**NOTE:** the control tie rod kit has always to be ordered separately.

Reducing valve, combined with electrohydraulic control kit has to be calculated as a normal working section.

**ORDER EXAMPLE:**

Complete valves with 3 sections F1600 requires a complete tie-rod kit /3.

Complete valves with 2 sections F1600 and 1 section with F1500 (reducing valve) requires a complete tie-rod kit /4.

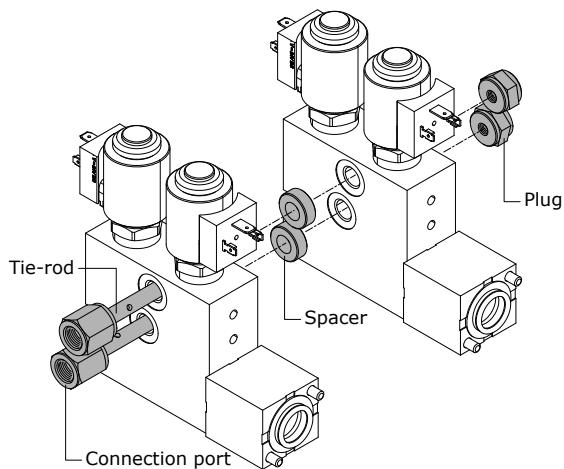**Order code fixed pressure reducing valve:**

**915000303** = reducing valve for BSP ports

**915000312** = reducing valve for UNF ports

**Order code for control tie rod (BSP):**

- 320103001** = control tie rod /1
- 320105001** = control tie rod /2
- 320105002** = control tie rod /3
- 320105003** = control tie rod /4
- 320105004** = control tie rod /5
- 320105005** = control tie rod /6
- 320105006** = control tie rod /7
- 320105007** = control tie rod /8
- 320105008** = control tie rod /9

**Order code for control tie rod (UNF):**


- 320103026** = control tie rod /1
- 320105026** = control tie rod /2
- 320105027** = control tie rod /3
- 320105028** = control tie rod /4
- 320105029** = control tie rod /5
- 320105030** = control tie rod /6
- 320105031** = control tie rod /7
- 320105032** = control tie rod /8
- 320105033** = control tie rod /9

## Compatibility table


SPOOL ACTION TYPE	SPOOL TYPE																				
	W001A	W001B	W002A	W002B	W003A	W003B	W004A	W004B	W005A	W005B	W006A	W006B	W009A	W009B	W010A	W011A	W012A	W013A	W015A	W016A	
H001	•																				
H002	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H004	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H005	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H009	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H010	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H011	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H012	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H120	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H101	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
H102	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
SPOOL RETURN ACTION TYPE	SPOOL TYPE																				
F001	•	•	W001B	W002A	W002B	W003A	W003B	W004A	W004B	W005A	W005B	W006A	W006B	W009A	W009B	W010A	W011A	W012A	W013A	W015A	W016A
F002	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F003	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F004	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F005																					
F009	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F010	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F011	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F012	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F013	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F020=F021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F022=F023	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F135=F136	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F126=F127	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F024=F025	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F026=F027	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F028=F029	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F0360=F0370	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F0450=F0460	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F0620=F0630	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F1500=F1510	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F1520=F1530	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F2500=F2510	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F2520=F2530	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F1600=F1610	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F2600=F2610	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



## Work section identification


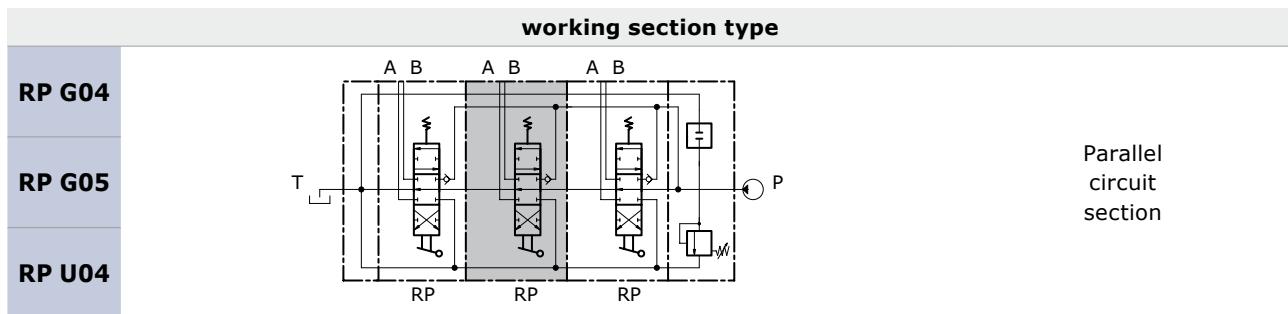





When the spool is operated it intercepts the by-pass gallery by diverting the flow of oil to service port A or B. If two or more spools are actuated at the same time, the oil will power the service port that has the lower load; by throttling the spools, the flow of oil can be divided between two or more service ports.

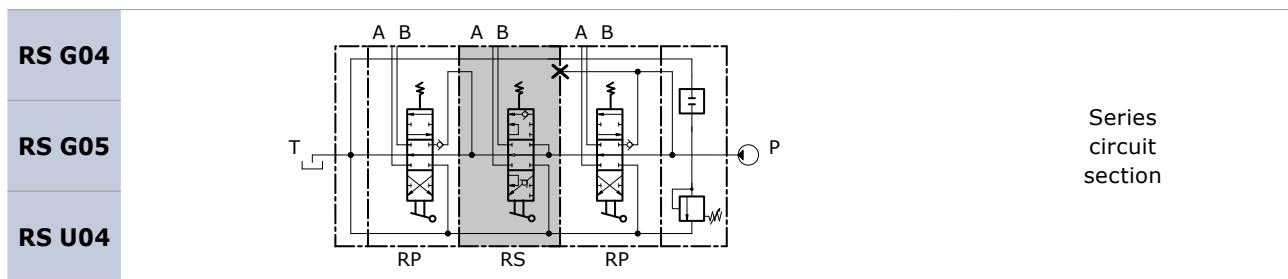

When the spool is operated it intercepts the switch gallery by diverting the flow of oil to service port A or B. The oil that flows back from the actuator is carried to the switch gallery thus making it available to the service ports downstream from the series section. The pressure drop downstream is added to the pressure drop of the section itself.

### Auxiliary valve identification

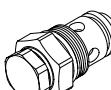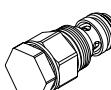code	description	schema	configuration	setting range (bar)			
				type	at full flow	type	at min. flow
01 PA	Antishock valve (port A)			A	30 / 110	A	20-A / 70-A
				B	111 / 180	B	71-A / 150-A
				C	181 / 290	C	151-A / 270-A
				D	291 / 350	D	271-A / 350-A
02 PA	Anticavitation valve (port A)						
03 PA	Combined valve (port A)			A	100 / 200	A	20-A / 80-A
				B	201 / 280	B	81-A / 250-A
				C	281 / 350	C	251-A / 350-A
04 PA	Pilot combined valve (port A)			A	50 / 420		
05 PA	Prearrangement for auxiliary valve (port A)						

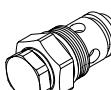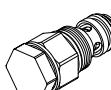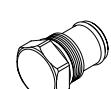code	description	schema	configuration	setting range (bar)			
				type	at full flow	type	at min. flow
01 PB	Antishock valve (port B)			A	30 / 110	A	20-A / 70-A
				B	111 / 180	B	71-A / 150-A
				C	181 / 290	C	151-A / 270-A
				D	291 / 350	D	271-A / 350-A
02 PB	Anticavitation valve (port B)						
03 PB	Combined valve (port B)			A	100 / 200	A	20-A / 80-A
				B	201 / 280	B	81-A / 250-A
				C	281 / 350	C	251-A / 350-A
04 PB	Pilot combined valve (port B)			A	50 / 420		
05 PB	Prearrangement for auxiliary valve (port B)						

### Auxiliary valve - Setting range

Sections designed to house auxiliary valve option require double choice on work ports A and B.  
Always indicate setting value when using antishock valve:

**01 PA (120) = setting at full flow**


**01 PA (120-A) = setting at min. flow**



## INTERMEDIATE INLET SECTION

Order example

		BE	009	150	A G05
1.	<b>BE</b>	inlet side			
2.	<b>009</b>	valve arrangement			
	<b>150</b>	setting (bar); when ordering a main relief valve it is necessary to specify setting			
3.	<b>A G05</b>	inlet position and available thread type			


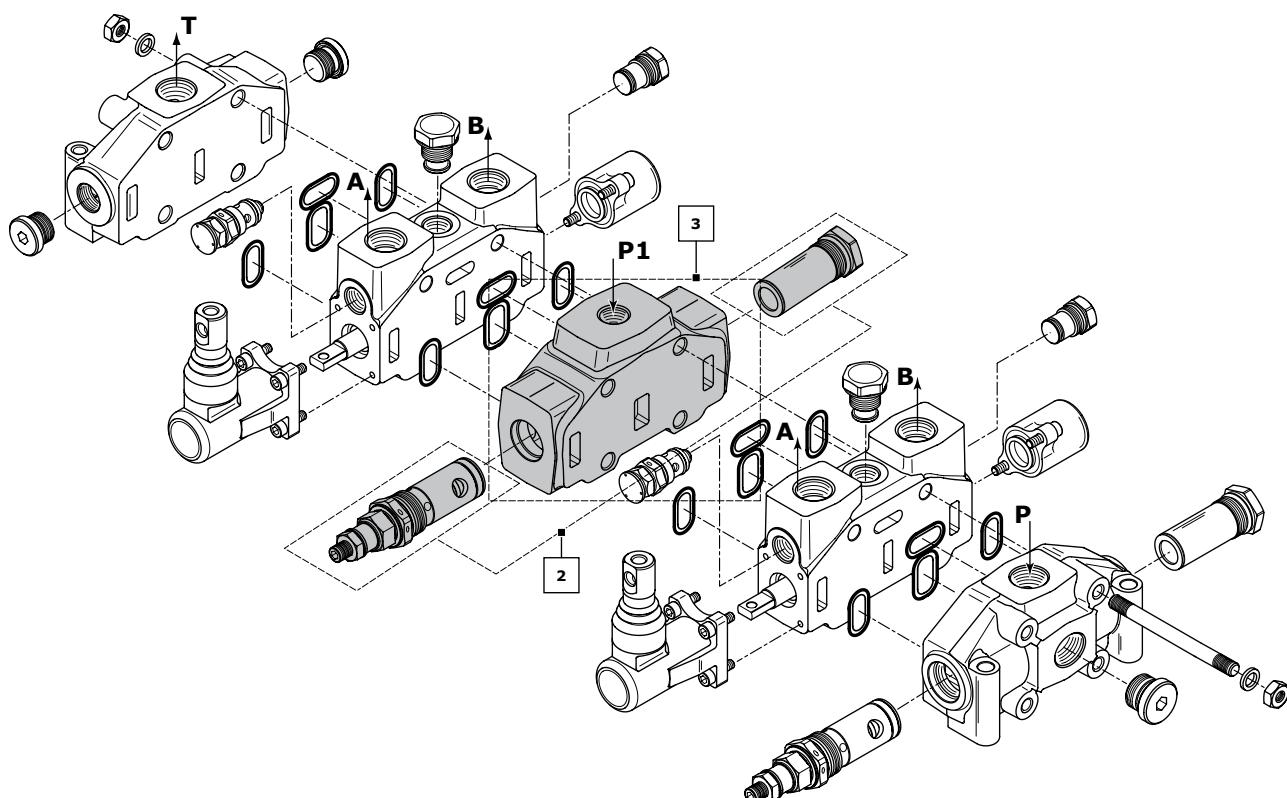


Rif.	Code	Description	Page
-	<b>BE</b>	Intermediate inlet section	
	<b>BV*</b>	Intermediate inlet section with pressure relief valve	<b>29</b>
1	<b>009</b>	Pilot operated pressure relief valve	
	<b>002</b>	Pilot operated pressure relief valve and Main anticavitation check valve	
	<b>019</b>	Without valves	
	<b>020</b>	Main anticavitation check valve	<b>30</b>
2	<b>A G04</b>	Upper inlet (thread G 1/2)	
	<b>A G05</b>	Upper inlet (thread G 3/4)	
	<b>A U04</b>	Upper inlet (thread 7/8" - 14 UNF)	



**NOTE:** when ordering a relief valve it is necessary to specify factory setting (example 150).

\* = omit the code for inlet positioning and thread

### Intermediate inlet section classifications




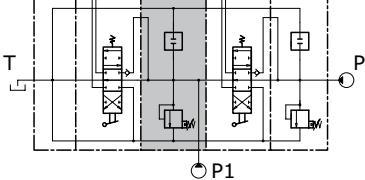
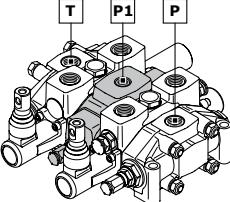
intermediate inlet type		
<b>BE</b>		 Intermediate inlet section

The intermediate inlet section is driven by two pumps ( $P + P_1$ ). The downstream elements can be set to a lower pressure than the upstream ones by adjusting the pressure relief valve of the intermediate section in question.

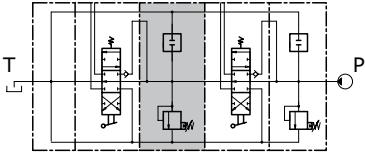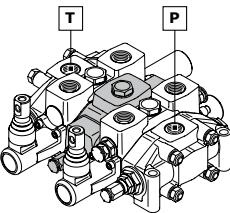
intermediate inlet type		
<b>BV</b>		 Intermediate inlet section with pressure relief valve

The intermediate inlet section and the elements are driven by a single pump ( $P$ ). The downstream elements can be set to a lower pressure than the upstream ones by adjusting the pressure relief valve of the intermediate section in question.

### Valve identification on intermediate inlet section

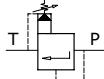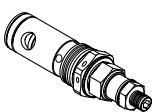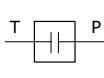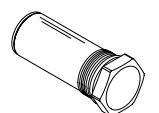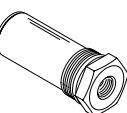type	schema	layout	description	type	schema	configurazione	descrizione
<b>2</b>			Pilot operated pressure relief valve	<b>4</b>			Externally piloted valve
<b>3</b>			Relief valve plugged	<b>11</b>			Plug with pressure-gauge connection

### Valve arrangement on intermediate inlet section

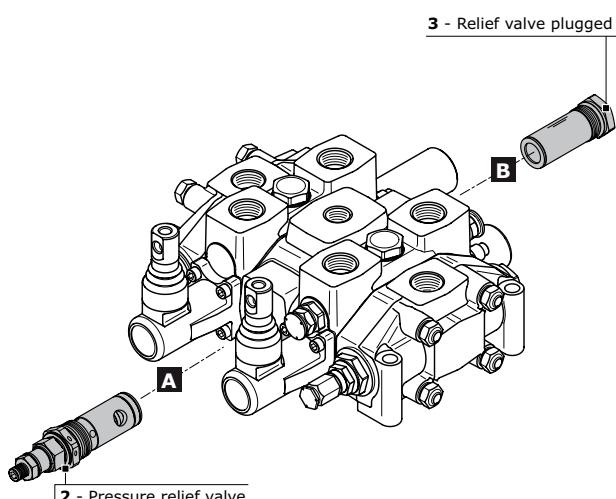

#### Combination valve example: 009 = 2A - 3B

- 009 Combination valve
- 2A Pressure relief valve in port A
- 3B Relief valve plugged in port B

#### The code identifies:

with a number, the type of valve; with a letter its position on the inlet section.

(A) = spool action side  
(B) = spool return action side

**NOTE:** when ordering a main relief valve it is necessary to specify setting



VALVE COMBINATION INLET SECTION	Valve type on port B			
	2	3	4	11
2		009	010	016
3	018	019	020	027
4	029	030		
11	085	086		

**Inlet position and available thread type**

Inlet combination and thread available	
A G04	
A G05	
A U04	

**Complete configuration samples for D6/2 with intermediate inlet section (BE)**


IR 009 150 A G05 ..... Right inlet section



W001A H001 F001A RP G05 ..... Working section

**BE 009 150 A G05 ..... Intermediate inlet section**

W001A H001 F001A RP G05 ..... Working section

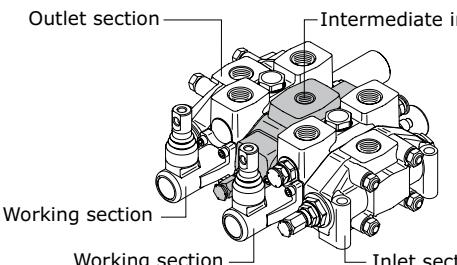


TJ A G05 ..... Outlet section

Working section

**Complete configuration samples for D6/2 with intermediate inlet section (BV)**

IR 009 150 A G05 ..... Right inlet section

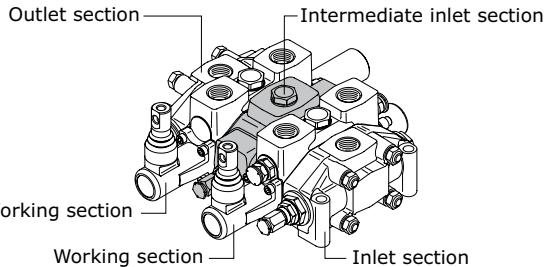

W001A H001 F001A RP G05 ..... Working section

**BV 009 150 ..... Intermediate inlet section**

W001A H001 F001A RP G05 ..... Working section


TJ A G05 ..... Outlet section

Working section

## INTERMEDIATE OUTLET SECTION

## Order example

	BF	A G05
BF	inlet side	
1. A G05	inlet position and available thread type	


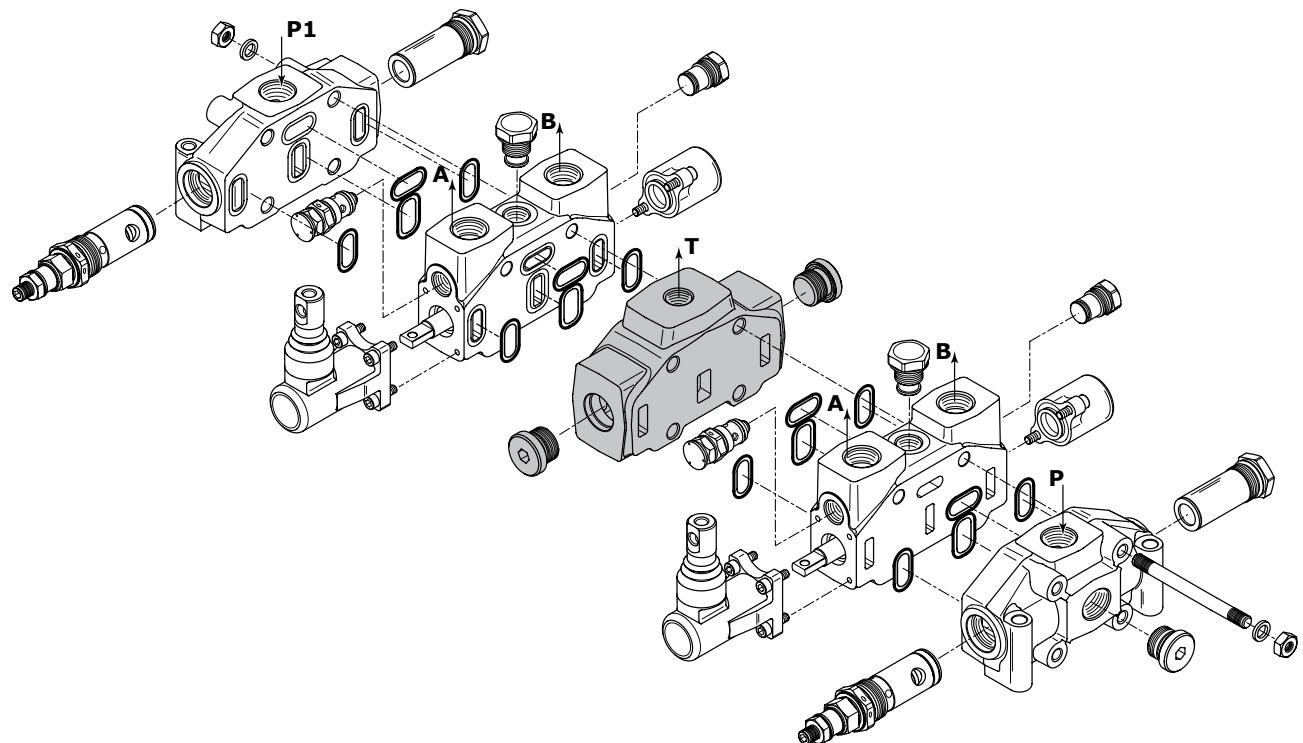


Rif.	Code	Type	Description	Page
-	<b>BF</b>		Intermediate outlet section with single tank return	
	<b>BG</b>		Intermediate outlet section with two tank returns	
1	<b>A G05</b>		Upper outlet (thread G 3/4)	
	<b>A U05</b>		Upper outlet (thread 1"1/16-12 UNF)	
	<b>G G05</b>	for	Front outlet side A (thread G 3/4)	
	<b>G U05</b>	BF	Front outlet side A (thread 1"1/16-12 UNF)	32
	<b>H G05</b>		Rear outlet side B (thread G 3/4)	
	<b>H U05</b>		Rear outlet side B (thread 1"1/16-12 UNF)	
<b>J G05</b>	for	Upper outlet HPCO - front side A and rear side B to T (thread G 3/4)		
<b>J U05</b>	BG	Upper outlet HPCO-front side A and rear side B to T (thread 1"1/16-12 UNF)		





## Intermediate outlet section classifications

## intermediate outlet type

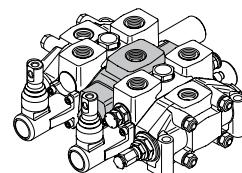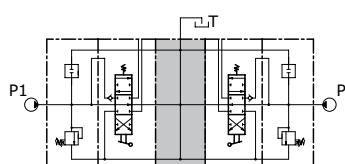**BF**

Intermediate outlet section  
with single tank return


The above outlet section allows the flow of oil of the two pumps and the tank ports to be piped to a single outlet T.

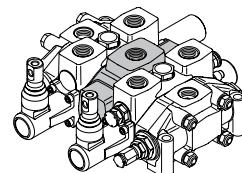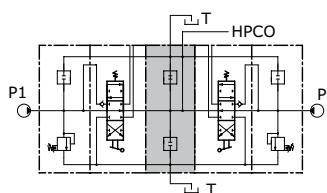**BG**

Intermediate outlet section  
with two tank returns


The section in question allows the flow of oil of the two pumps to be piped in two outlets: HPCO for powering another directional control valve, T for discharge of the work ports. In order to obtain this, the two T need to be linked.

## Outlet combination and thread available

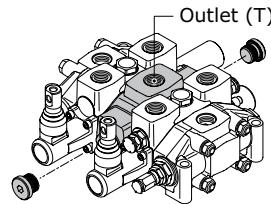**A G05**


available  
only for  
**BF**

Upper  
outlet (T)

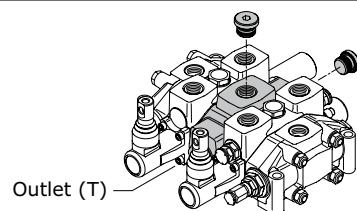**A G06****A U05****G G05****G G06****G U05****H G05****H G06****H U05****J G05****J G06****J U05**


available  
only for  
**BF**

Front outlet  
side A (T)

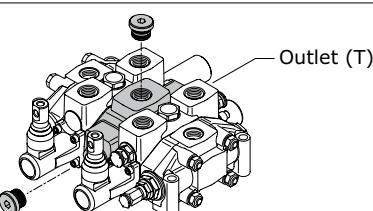

available  
only for  
**BF**

Rear outlet  
side B (T)

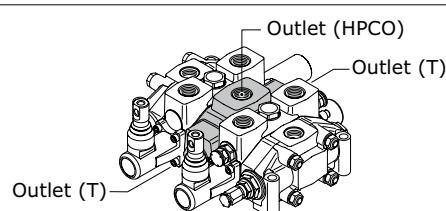

available  
only for  
**BG**

Upper outlet HPCO  
front side A and  
rear side B to T

**Complete configuration samples for D6/2 with intermediate outlet section (BF)**


IR 009 150 A G05..... Right inlet section

W001A H001 F001A RP G05 ..... Working section

**BF A G05 .....****Intermediate outlet section**

W001A H001 F001A RP G05 ..... Working section

IL 009 150 A G05 ..... Left inlet section

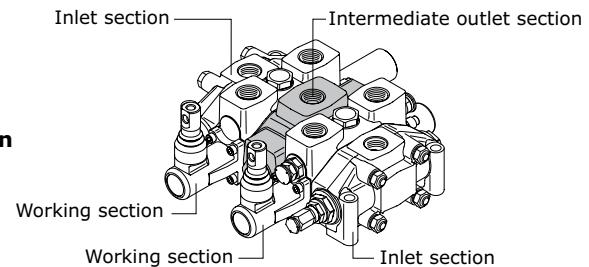**Complete configuration samples for D6/2 with intermediate outlet section (BG)**


IR 009 150 A G05..... Right inlet section

W001A H001 F001A RP G05 ..... Working section

**BG J G05 .....****Intermediate outlet section**

W001A H001 F001A RP G05 ..... Working section

IL 009 150 A G05 ..... Left inlet section

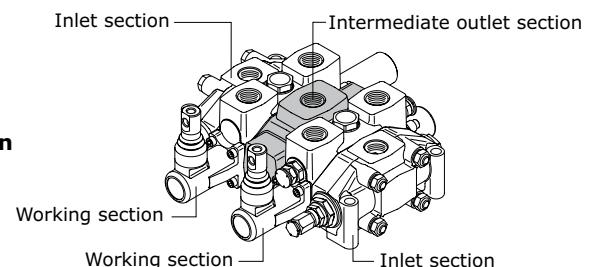




## INTERMEDIATE FLOW DIVIDERS

## Operating principle

The intermediate section of the flow divider allows sections of the divider itself to be powered, with a flow rate set by the user and independent of the downstream load. The excess flow may power another directional control valve or be returned directly to tank. The flow adjustment range ( $Q = \text{l/min}$ ) change between:

- Minimum  $Q = 3 \text{ l/min}$
- Maximum  $Q = 40 \text{ l/min}$

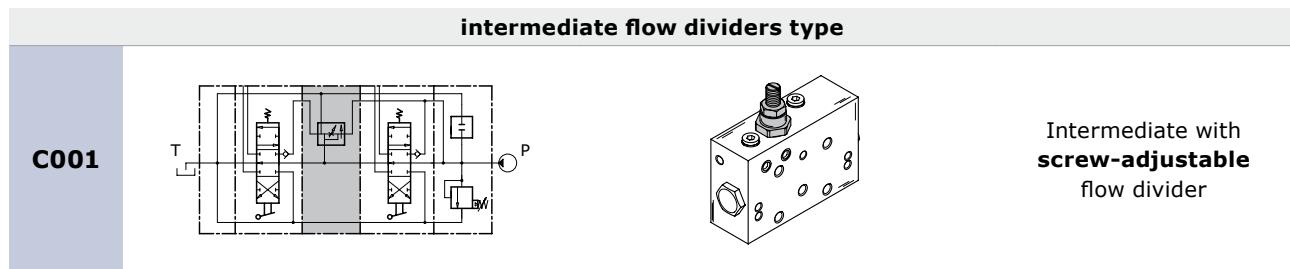**Complete configuration samples for D6/2 with intermediate flow divider**


IR 009 150 A G05..... Right inlet section

W001A H001 F001A RP G05 ..... Working section

**C001.....Intermediate flow divider**


W001A H001 F001A RP G05 ..... Working section

TJ A G05 ..... Outlet section

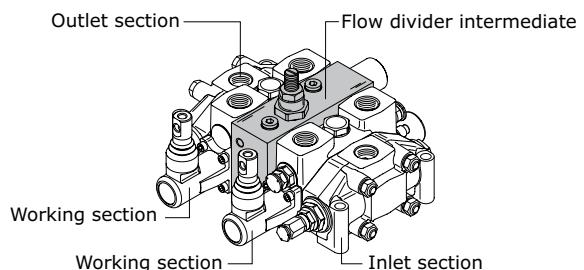

## OUTLET SECTION (VERSION 1 OUTLET)

### Order example

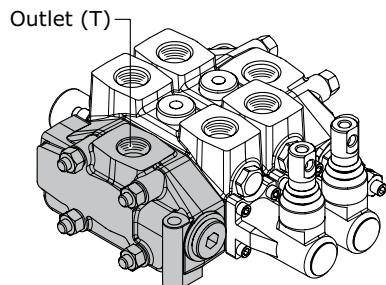


<b>TJ</b>	<b>A G06</b>
1. <b>TJ</b>	outlet section type
2. <b>A G06</b>	outlet position and available thread type

Rif.	Code	Description	Page
1	<b>TJ</b>	Outlet section with single return (T) right-side inlet (P)	
	<b>TK</b>	Outlet section with single return (T) left-side inlet (P)	
2	<b>A G05</b>	Upper outlet (thread G 1/2)	
	<b>C G05</b>	Central outlet (thread G 1/2)	
	<b>A G06</b>	Front outlet side A (thread G 1/2)	36
	<b>C G06</b>	Rear outlet side B (thread G 1/2)	
	<b>A U05</b>	Upper outlet (thread 3/4" - 16 UNF)	
	<b>C U05</b>	Central outlet (thread 3/4" - 16 UNF)	

## OUTLET SECTION (HPCO VERSION OUTLET)

### Order example - HPCO version Outlet

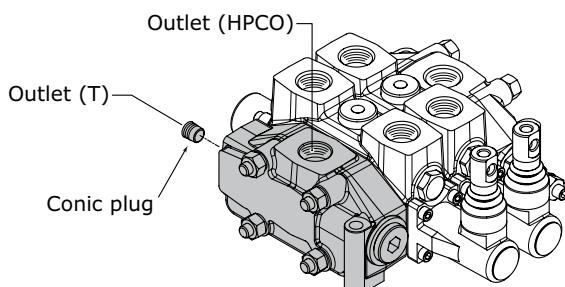


<b>TM</b>	<b>M G06</b>
1. <b>TM</b>	outlet section type
2. <b>M G06</b>	outlet position and available thread type

Rif.	Code	Description	Page
1	<b>TM</b>	Outlet section with two return (T-HPCO) right-side inlet (P)	
	<b>TN</b>	Outlet section with two return (T-HPCO) left-side inlet (P)	
2	<b>M G05</b>	HPCO upper outlet T (tank) rear side outlet B (thread G 3/4)	
	<b>N G05</b>	HPCO upper outlet T (tank) front outlet side A (thread G 3/4)	
	<b>M G06</b>	HPCO upper outlet T (tank) rear side outlet B (thread G 1)	37
	<b>N G06</b>	HPCO upper outlet T (tank) front outlet side A (thread G 1)	
	<b>M U05</b>	HPCO upper outlet T (tank) rear side outlet B (thread 1"1/16-12 UNF)	
	<b>N U05</b>	HPCO upper outlet T (tank) front outlet side A (thread 1"1/16-12 UNF)	











## Outlet with single tank classification

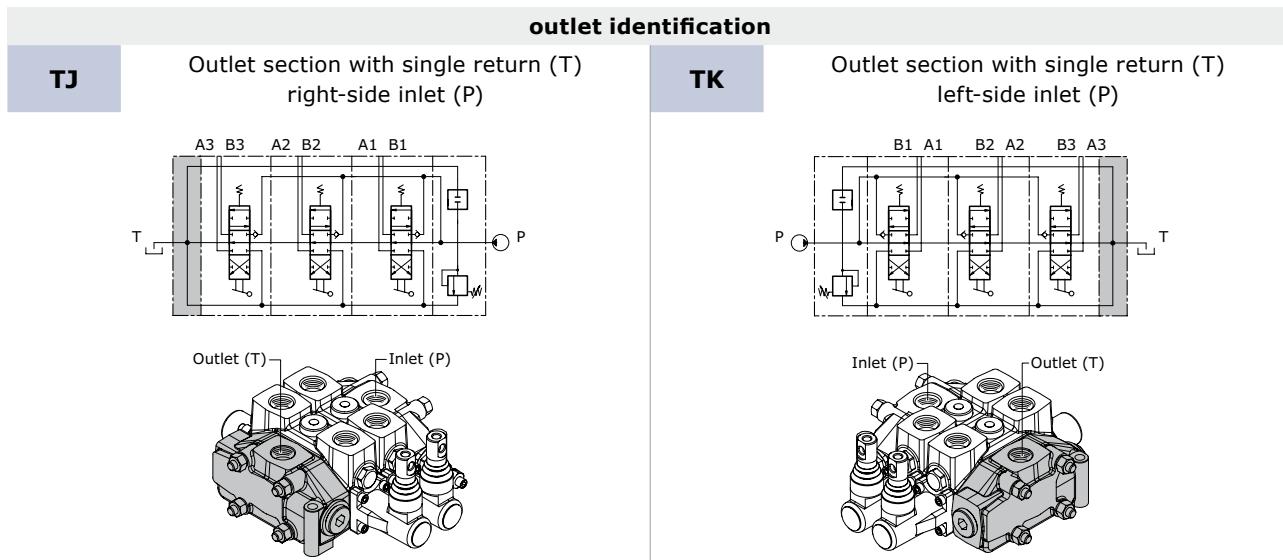

outlet combination and thread available	
<b>A G05</b>	Upper outlet (thread G 3/4)
<b>A G06</b>	Upper outlet (thread G 1)
<b>A U05</b>	Upper outlet (thread 1"1/16-12 UNF)
<b>C G05</b>	Central outlet (thread G 3/4)
<b>C G06</b>	Central outlet (thread G 1)
<b>C U05</b>	Central outlet (thread 1"1/16-12 UNF)
<b>F G05</b>	Lateral outlet side A (thread G 3/4)
<b>F G06</b>	Lateral outlet side A (thread G 1)
<b>F U05</b>	Lateral outlet side A (thread 1"1/16-12 UNF)
<b>G G05</b>	Front outlet side A (thread G 3/4)
<b>G G06</b>	Front outlet side A (thread G 1)
<b>G U05</b>	Front outlet side A (thread 1"1/16-12 UNF)
<b>H G05</b>	Rear outlet side B (thread G 3/4)
<b>H G06</b>	Rear outlet side B (thread G 1)
<b>H U05</b>	Rear outlet side B (thread 1"1/16-12 UNF)

**Outlet with two tanks classification**

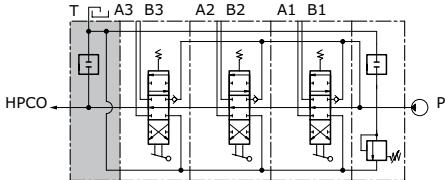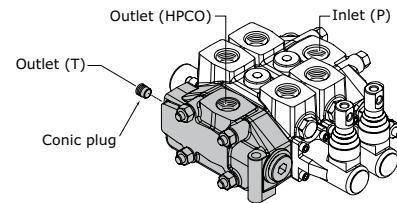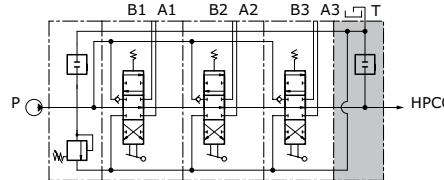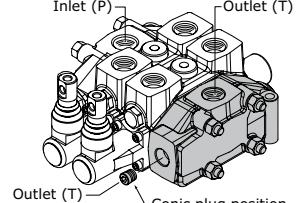
outlet identification	
<b>TM</b>	Outlet section with two return (T-HPCO) right-side inlet (P)
	 
<b>TN</b>	Outlet section with two return (T-HPCO) left-side inlet (P)
	 

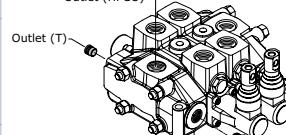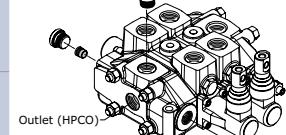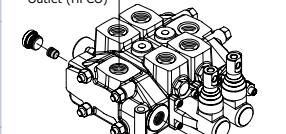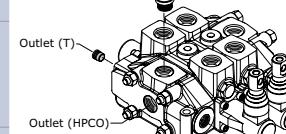outlet combination and thread available			
<b>M G05</b>	HPCO Upper outlet T side outlet B (thread G 3/4)	<b>Q G05</b>	HPCO Central outlet T front outlet side A (thread G 3/4)
<b>M G06</b>		<b>Q U05</b>	
<b>M U05</b>	HPCO Upper outlet T side outlet B (thread 1"1/16-12 UNF)		HPCO Central outlet T front outlet side A (thread 1"1/16-12 UNF)
<b>N G05</b>	HPCO Upper outlet T front outlet side A (thread G 3/4)	<b>P G05</b>	HPCO Central outlet T rear outlet side B (thread G 3/4)
<b>N G06</b>		<b>P G06</b>	
<b>N U05</b>	HPCO Upper outlet T front outlet side A (thread G 1)	<b>P U05</b>	HPCO Central outlet T rear outlet side B (thread G 1)
	HPCO Upper outlet T front outlet side A (thread 1"1/16-12 UNF)		HPCO Central outlet T rear outlet side B (thread 1"1/16-12 UNF)




## CARRY-OVER CONNECTION (HPCO)

This option, available on all D6, allows the sectional valve to feed a second valve, by extending the free flow channel. In this configuration, the valve need a separated port for connection to tank.

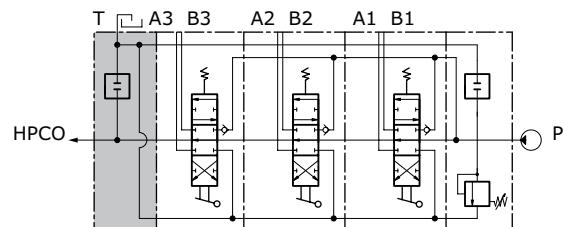


It is possible to transform sectional valve from standard to HPCO version just by ordering the appropriate conic plug:

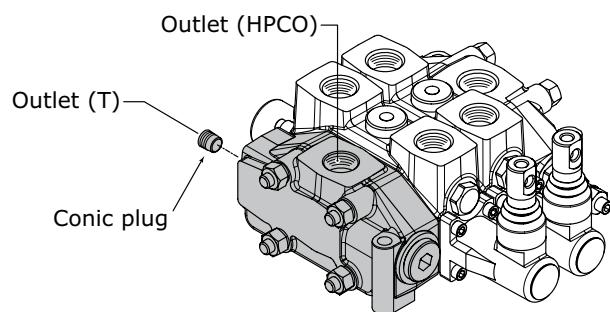

code (HPCO Plug identification)	description	q.ty
<b>413010203</b>	conic plug G 1/4 x 13	1

## D6 SPARE PARTS LIST

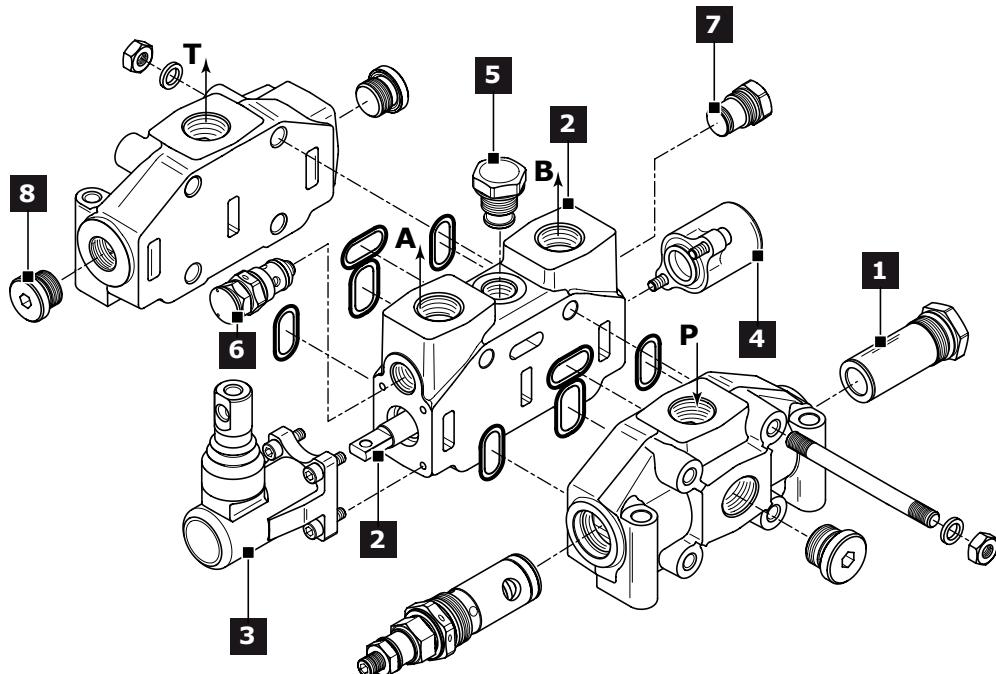

Ref.	Description	Order code	Q.ty	Code	Note
<b>1</b>	Pilot operated pressure relief valve (*)	<b>6364</b>			Setting: 100 bar
		<b>2608</b>	1		Setting: 200 bar
		<b>2744</b>			Setting: 300 bar
<b>2</b>	Relief valve plugged	<b>430107001</b>	1		
	Main Anticavitation check valve	<b>915050701</b>	1		-
	External piloted valve	<b>915040701</b>	1		
	Solenoid dump valve (12 vdc) (**)	<b>915040702</b>	1		
	Solenoid dump valve (24 vdc) (**)	<b>915040703</b>	1		
	Plug with pressure-gauge connection	<b>430107003</b>	1		
<b>3</b>	3 positions double-acting spool	<b>421205014</b>		<b>W001A</b>	for protected lever
		<b>421205017</b>	1	<b>W001B</b>	for protected lever
		<b>421205005</b>		<b>W001A</b>	for hydraulic actuation
	3 positions double-acting A and B to tank spool	<b>421205008</b>		<b>W002A</b>	for protected lever
		<b>421205022</b>	1	<b>W002B</b>	for protected lever
		<b>421205006</b>		<b>W002A</b>	for hydraulic actuation
	3 positions single-acting on A	<b>421205028</b>	1	<b>W005A</b>	for protected lever
	3 positions single-acting on B	<b>421205030</b>	1	<b>W006A</b>	for protected lever
	4 positions double-acting with float in the 4 <sup>th</sup> pos.	<b>421205024</b>		<b>W012A</b>	for protected lever
		<b>421205068</b>	1		for hydraulic actuation
<b>4</b>	Protected lever	<b>320305008</b>	1	<b>H001 = H002</b>	
		<b>320305010</b>			only for W012 spool
	Control without lever	<b>320305002</b>	1	<b>H004</b>	
		<b>320305003</b>			only for W012 spool
	Protected vertical safety lever	<b>320305001</b>	1	<b>H101 = H102</b>	
<b>5</b>		<b>320305004</b>			only for W012 spool
	Hydraulic actuation with side ports	<b>320505001</b>	2	<b>H005</b>	
		<b>320505011</b>	1		only for W012 spool



Ref.	Description	Order code	Q.ty	Code	Note
	3 position spring centred spool	<b>320705009</b>	1	<b>F001A</b>	
	Detent in A and B	<b>320805022</b>	1	<b>F002A</b>	
	Detent in A	<b>320805021</b>	1	<b>F003A</b>	
	Detent in B	<b>320805024</b>	1	<b>F004A</b>	
	Detent in 4 <sup>th</sup> position	<b>320805004</b>	1	<b>F005A</b>	only for W012 spool
	Prearrangement dual command	<b>320705023</b>	1	<b>F013A</b>	
	Pneumatic control ON-OFF	<b>321105004</b>	1	<b>F020A=F021A</b>	BSP ports
	Proportional Pneumatic control	<b>321205004</b>	1	<b>F022A=F023A</b>	BSP ports
	Electropneumatic control ON-OFF (12 vdc)	<b>321605001</b>	1	<b>F0620</b>	
	Electropneumatic control ON-OFF (24 vdc)	<b>321605002</b>	1	<b>F0630</b>	
	Load limit in A and B	<b>320005011</b>	1	<b>F024A=F025A</b>	BSP ports
	Load limit in A	<b>320005009</b>	1	<b>F026A=F027A</b>	BSP ports
	Load limit in B	<b>320005010</b>	1	<b>F028A=F029A</b>	BSP ports
<b>4</b>	Electrical load limit (normally closed contacts)	<b>320005007</b>	1	<b>F0360=F0370</b>	
	Electrical load limit (normally open contacts)	<b>320005020</b>	1	<b>F0450=F0460</b>	
	Electrohydraulic ON-OFF (12 vdc)	<b>321405021</b>	1	<b>F1600</b>	
	Electrohydraulic ON-OFF (24 vdc)	<b>321404022</b>	1	<b>F1610</b>	
	Electrohydraulic Proportional (12 vdc)	<b>322005001</b>	1	<b>F2600</b>	
	Electrohydraulic Proportional (24 vdc)	<b>322005002</b>	1	<b>F2610</b>	
	Electrohydraulic ON-OFF (12 vdc) with reducing valve	<b>321405023</b>	1	<b>F1500=F1520</b>	BSP ports
	Electrohydraulic ON-OFF (24 vdc) with reducing valve	<b>321405024</b>	1	<b>F1510=F1530</b>	BSP ports
	Electrohydraulic Proportional (12 vdc) with reducing valve	<b>322005003</b>	1	<b>F2500=F2520</b>	BSP ports
	Electrohydraulic Proportional (24 vdc) with reducing valve	<b>322005004</b>	1	<b>F2510=F2530</b>	BSP ports
	Electrohydraulic ON-OFF (12 vdc) with reducing valve	<b>321405031</b>	1	<b>F1500=F1520</b>	UNF ports
	Electrohydraulic ON-OFF (24 vdc) with reducing valve	<b>321405032</b>	1	<b>F1510=F1530</b>	UNF ports
	Electrohydraulic Proportional (12 vdc) with reducing valve	<b>322005005</b>	1	<b>F2500=F2520</b>	UNF ports
	Electrohydraulic Proportional (24 vdc) with reducing valve	<b>322005006</b>	1	<b>F2510=F2530</b>	UNF ports
<b>5</b>	Check valve on the work section	<b>320205005</b>	1	-	only for RP and RT section
		<b>4205</b>			Setting: 100 bar
	Antishock valve on port A	<b>2643</b>		<b>01 PA</b>	Setting: 200 bar
<b>6</b>		<b>3623</b>	1		Setting: 300 bar
	Anticavitation valve on port A	<b>915080501</b>		<b>02 PA</b>	
	Prearrangement for auxiliary valve on port A	<b>430405001</b>		<b>05 PP</b>	
		<b>4205</b>			Setting: 100 bar
	Antishock valve on port B	<b>2643</b>		<b>01 PB</b>	Setting: 200 bar
<b>7</b>		<b>3623</b>	1		Setting: 300 bar
	Anticavitation valve on port B	<b>915080501</b>		<b>02 PB</b>	
	Prearrangement for auxiliary valve on port B	<b>430405001</b>		<b>05 PB</b>	
	Plug kit (G 3/4)	<b>430000020</b>		<b>G05</b>	
<b>8</b>	Plug kit (G 1)	<b>430000021</b>	1	<b>G06</b>	
	Plug kit (1"1/12"-16 UNF)	<b>300007002</b>		<b>U05</b>	


**Note**

(\*) = for different settings please contact our Sales Dpt.

(\*\*) = electric dump valve coil can be ordered  
separately as spare part: (see drawing "A")  
Ordering code Coil 12 vdc: 413171235  
Ordering code Coil 24 vdc: 413172432


(#) = Detent in A and B Kick-out is available only  
with special spool assembly

Coil - 12 Vdc = 413171235  
Coil - 24 Vdc = 413172432

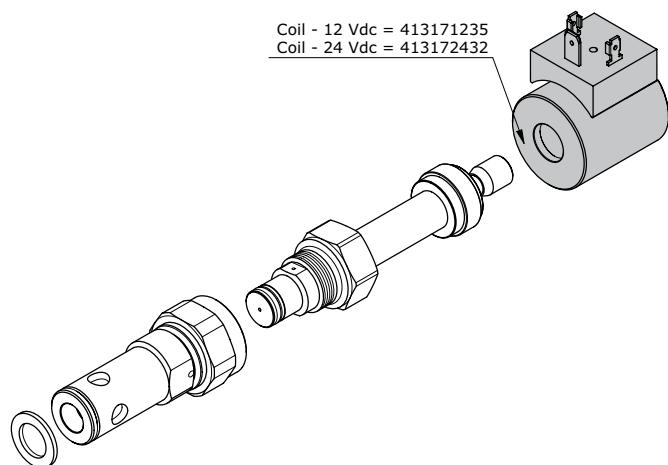



## GASKET KITS

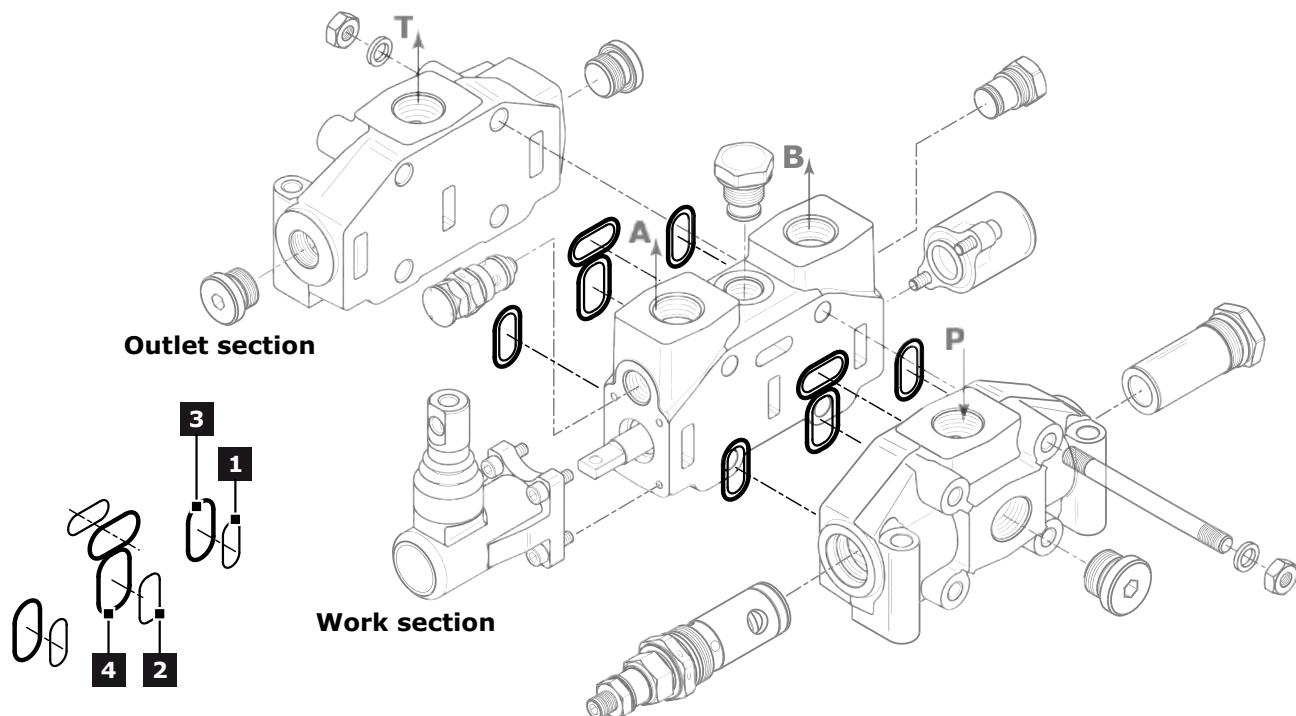

Outlet and work section			
Rif.	Order code	Description	Q.ty
1	423401019	Ring	3
2	423401020	Ring	1
3	412010609	O.R. 70SH 23,47 x 2,62 (2-119)	3
4	412010611	O.R. 70SH 26,65 x 2,62 (2-121)	1

Complete Gasket kit: order code - 350905001

## INSTALLATION

### Guidelines


- Mount the control valve securely to a flat surface (recommended 3 point fixing); at the time do not use a hammer to positioning by hitting.
- When handling the control valve, be careful not hold the pilot cover or return spring cap of the spool or accessory valves such as main relief valves and anti-shock relief valves.
- Clean piping materials sufficiently before use.
- Make sure to prevent the port openings from being entered with dust or foreign matters.
- Tighten the port connectors surely with the recommended fastening torques.
- Do not direct the jet of a pressure washing unit directly to the valve.

### Fittings tightening torque (Nm)

thread type	port P	Port A - B	Port T
BSP (ISO - 228)	G 1/2	G 1/2	G 1/2
with rubber sealing (DIN 3869)	70	70	70
with copper or steel and rubber washer	70	70	70
BSP (ISO - 228)	G 3/4	G 3/4	G 3/4
with rubber sealing (DIN 3869)	90	90	90
with copper or steel and rubber washer	90	90	90
UN-UNF (ISO - 725)	1"1/16 12 UNF	1"1/16 12 UNF	1"1/16 12 UNF
with O.R.	90	90	90

### General clamping torque

The following table provides the main tightening torques of the distributor D6:

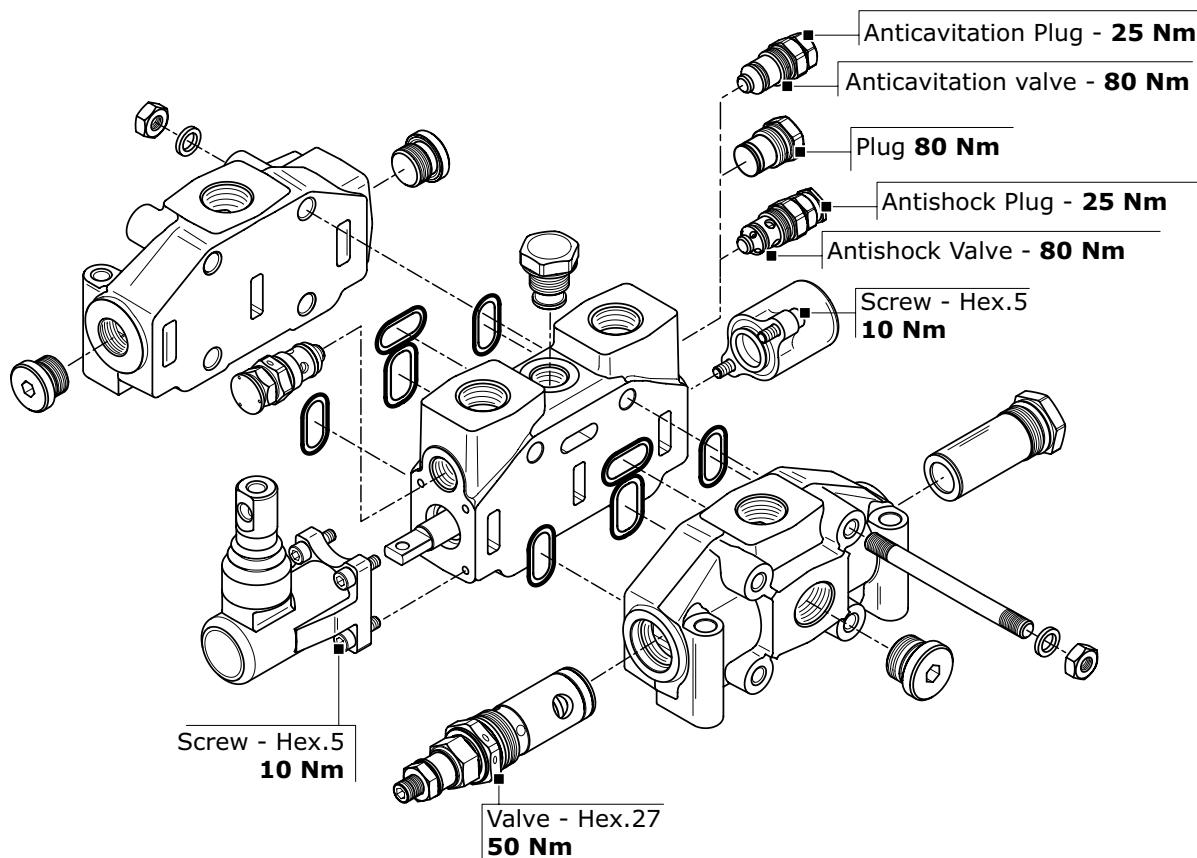



## Dimensions - Thread codes

The connection ports size is indicated by an ordering code common for all Hydrocontrol products. Following table shows all available connections.

## METRIC THREAD (ISO 9974-1)

Type	M18x1,5	M22x1,5	M27x2
Code	<b>M01</b>	<b>M02</b>	<b>M03</b>


## BSP THREAD (ISO 1179-1)

Type	1/4"	3/8"	1/2"	3/4"	1"	1"1/4	1"1/2	2"
Code	<b>G02</b>	<b>G03</b>	<b>G04</b>	<b>G05</b>	<b>G06</b>	<b>G07</b>	<b>G08</b>	<b>G09</b>

## UN / UNF THREAD (ISO 11926-1)

Type	9/16" 18 UNF SAE6	3/4" 16 UNF SAE8	7/8" 14 UNF SAE10	1"1/16 12 UNF SAE12	1"5/16 12 UNF SAE16	1"5/8 12 UNF SAE20
Code	<b>U02</b>	<b>U03</b>	<b>U04</b>	<b>U05</b>	<b>U06</b>	<b>U07</b>

## Dimensions - SAE Flange codes

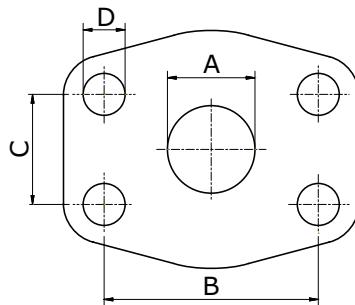

## SAE / 3000 FLANGE (ISO 6162-1)

Type	3/4" (MA)	3/4" (UNC)	1" (MA)	1" (UNC)	1"1/4 (MA)	1"1/4 (UNC)	1"1/2 (MA)	1"1/2 (UNC)	2" (MA)	2" (UNC)	3" (MA)	3" (UNC)
Code	<b>S03</b>	<b>S04</b>	<b>S05</b>	<b>S06</b>	<b>S07</b>	<b>S08</b>	<b>S09</b>	<b>S10</b>	<b>S11</b>	<b>S12</b>	<b>S15</b>	<b>S16</b>
A	19	19	25	25	32	32	38	38	51	51	76	76
B	47,6	47,6	52,4	52,4	58,7	58,7	69,9	69,9	77,8	77,8	106,4	106,4
C	22,3	22,3	26,2	26,2	30,2	30,2	35,7	35,7	42,9	42,9	61,9	61,9
D	M10	3/8-16	M10	3/8-16	M10	7/16-14	M12	1/2-13	M12	1/2-13	M16	5/8-11


## SAE / 6000 FLANGE (ISO 6162-2)

Type	3/4" (MA)	3/4" (UNC)	1" (MA)	1" (UNC)	1"1/4 (MA)	1"1/4 (UNC)	1"1/2 (MA)	1"1/2 (UNC)
Code	<b>S33</b>	<b>S34</b>	<b>S35</b>	<b>S36</b>	<b>S37</b>	<b>S38</b>	<b>S39</b>	<b>S40</b>
A	19	19	25	25	32	32	38	38
B	50,8	50,8	57,2	57,2	66,6	66,6	79,3	79,3
C	23,8	23,8	27,8	27,8	31,8	31,8	36,5	36,5
D	M10	3/8-16	M12	7/16-14	M14	1/2-13	M16	5/8-11

## GENERAL CONDITIONS AND PATENTS

### Product identification

All Hydrocontrol products have an identifying plate placed in specific position.

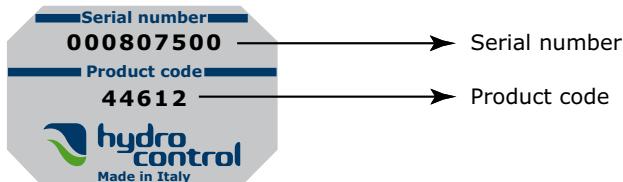

#### Serial number:

It univocally identifies the physical valve: this provides an easy way to find all sales and production details.

#### Product code:

It is a number univocally identifying the configuration and pressure settings of a valve.

### Introduction

These general conditions apply to all general supplies from Hydrocontrol s.p.a., after receiving orders from the Customer. Should commercial terms such as EXW, DDP, etc be mentioned, of course the Incoterms of the International Chamber of Commerce must be referred to, according to the test existing when the general supply conditions are agreed on.

### Management of orders

No Customer's order is binding to Hydrocontrol s.p.a. if Hydrocontrol s.p.a. has not confirmed the order in writing. Hydrocontrol s.p.a. commits to supplying the orders in compliance with the order confirmation that has been issued. Any disagreement with the content of the order confirmation must be communicated in writing to Hydrocontrol s.p.a. within and no later than 5 days from the delivery of the order confirmation. The Customer commits to paying for the goods supplied by Hydrocontrol s.p.a., according to the prices indicated on the order confirmation.

### Payment conditions

The Parties agree on the payment terms at the beginning of the supply. The terms will be indicated on the order confirmation. Should the Customer be late with the payments, Hydrocontrol S.p.a. will be entitled to require the payment of interests on arrears based on the exiting Prime Rate increased by 2%. Should there be any payment delay, Hydrocontrol s.p.a. will be entitled not to process the Customer's purchase order, even if it has already been confirmed.

### Delivery and shipment

The goods are always supplied Ex Works, even when Hydrocontrol s.p.a. agrees with the Customer that the shipment, or a part of it, will be arranged by Hydrocontrol s.p.a. It is agreed that the Customer will bear the risk of goods deterioration or damaging from the moment the goods are handed by Hydrocontrol s.p.a. to the first carrier.

### Product characteristics

Hydrocontrol s.p.a. commits to supplying good quality products, compliant with the technical specifications declared on the technical tables and on the catalogue. Hydrocontrol s.p.a., even without notice, at its own discretion, reserves the right to modify the products as necessary, without these changes altering the main characteristics of the products.

### Claims

Any claims about defects on delivered products (just as an example: claims about the packaging, the number, the quantity or the external product characteristics) will have to be notified to Hydrocontrol s.p.a. in writing, within and no later than 7 days from reception of the goods, otherwise the claims will be considered as null and void. Occult defects (the defects of the goods that cannot be spotted with a careful control of the goods received by the Customer), will have to be notified in writing to Hydrocontrol s.p.a. within 7 days from the discovery of the defect, and anyhow no later than 12 months from the delivery of the goods, otherwise the claim will be considered as null and void. Even in case of claim or objection, the Customer will never be entitled to suspend or delay the payments to Hydrocontrol s.p.a. for the products subject to claim or objection nor for any other supply.

**GENERAL CONDITIONS AND PATENTS****Warranty**

Should the products supplied by Hydrocontrol not be compliant or have the required quality and should this defect be due to Hydrocontrol, Hydrocontrol s.p.a. commits, at its choice, to replace or repair the faulty products, as long as the defect or lack of compliance is notified to Hydrocontrol s.p.a. in writing, as specified at point 6, within and no later than 18 months from product delivery. On the products that have been fixed or replaced in accordance with what specified above, the above-mentioned warranty applies. The 12 month duration starts from the date of repair or replacement. In case of defects, lack of quality or in case of lack of compliance for the supplied products, with the exception of fraud or serious offence, Hydrocontrol s.p.a. only commits to repairing or replacing the faulty products, according to what specified above. This warranty replaces any other Supplier's warranty or liability established by the law. This warranty excludes any other liability contractual or extra-contractual by Hydrocontrol s.p.a. on the products supplied by Hydrocontrol (as a mere example: damage refund, loss of profit, product recall campaign, etc). Hydrocontrol s.p.a. has signed a product civil liability police, with a suitable maximum coverage.

**Ownership retention**

The products supplied by Hydrocontrol s.p.a. will be owned by the latter until Hydrocontrol receives the complete payment for the supplied goods.

**Obligation confidentiality**

Hydrocontrol s.p.a. commits to not disclosing the technical and commercial information it receives from the Customer, unless this information has already been publicly disclosed.

**Patents**

The Customer is not allowed to use the provided Products, or a part of them, their descriptions or drawings protected or not protected by Patent or registered trademark in order to design or make similar products, unless Hydrocontrol s.p.a. previously issues its written authorization. Should Hydrocontrol s.p.a. give its written authorization, all patents, trademarks, registered designs, copyrights and intellectual property rights related or connected to the Products provided by Hydrocontrol s.p.a. will stay Hydrocontrol's property. The Customer commits to respecting the highest confidentiality.

**Applicable law and court of jurisdiction**

Hydrocontrol s.p.a.'s supplies are regulated by these General Supply Conditions and, for anything not defined here, by the Italian law. Any controversy related, generated or connected to the supply of Products by Hydrocontrol s.p.a., where Hydrocontrol s.p.a. is involved, will be exclusively dealt with by the Court of Bologna.

**Walvoil nel mondo - Walvoil worldwide**  
**Sede principale, Filiali e Uffici di rappresentanza**  
**Headquarters, Subsidiaries and Representative Offices**

**Walvoil S.p.A. - Headquarters**

Via Adige, 13/D . 42124 Reggio Emilia . Italy  
Phone +39 0522 932411 . info@walvoil.com - www.walvoil.com

**Business Unit Hydrocontrol**

Via San Giovanni, 481 . 40060 Osteria Grande  
Castel S. Pietro Terme . Bologna . Italy  
Phone +39 051 6959411

**Galtech Site**

Via Portella della Ginestra, 10 . 42025 Cavriago  
Zona Industriale Corte Tegge . Reggio Emilia . Italy  
Phone +39 0522 932411

**AUSTRALASIA**

**Walvoil Fluid Power Australasia Pty Ltd**  
13 Vanessa Way . Delahey VIC 3037 . Melbourne . Australia  
TEL. 0061 458 918 750 . australasia@walvoil.com

**BRASILE . BRAZIL**

**Interpump Hydraulics Brasil Ltda - Walvoil Division**  
Gilberto de Zorzi, 525 . Forqueta Caxias do Sul (RS)  
TEL. 0055 54 3223 2373 . infobrasil@walvoil.com

**CANADA**

**Galtech Canada Inc.**

3100, Jacob Jordan . Terrebonne . Qc J6X 4J6 . Canada  
Phone +1 450 477 1076 Ext:225 . info@galtechcanada.com

**CINA . CHINA**

**Walvoil Fluid Power (Shanghai) Company Limited**

24, Lane 129, Dieqiao Road . Pu Dong . Kanqiao Industrial Zone Shanghai (201319)  
TEL. 0086 21 60979800 . info@walvoil.com.cn

**Guangzhou Bushi Hydraulic Technology Ltd**

Shangwei Shasheshe, Yuehu Village . Xiancun, Xintang Town . Zengcheng City  
511335 Guangzhou . Guangdong Province China  
Phone +86 021 52380695 . fareast@hydrocontrol-inc.com

**COREA DEL SUD . SOUTH KOREA**

**Walvoil Fluid Power Korea Ltd.**

80-15, Oseongsandan 1Ro, Oseong-Myun, Pyungtaek, Kyungki . Korea 451-872  
TEL. +82 31 682 6030 . info@walvoil.co.kr

**FRANCIA . FRANCE**

**Walvoil Fluid Power France**

362 rue de Bretagne . 44540 Vritz  
TEL. 0033 2 41 94 41 06 . france@walvoil.com

**INDIA**

**HC Hydraulic Technology(P) LTD**

A5(B) Ngef Ancillary Indl. Estate . Whitefield Road  
Mahadevpura (Po) . Bangalore 560048 . India  
Phone +91 080 40454707 . info@hydrocontrol-india.com

**Walvoil Fluid Power (India) PVT. LTD.**

No 23, Doddanakundi Industrial Area Mahadevapura Post Behind Graphite India  
Bangalore 560 048  
TEL. 0091 80 41842900 . info@walvoil.co.in

**U.S.A.**

**Hydrocontrol Inc.**

1109, Technology Drive . Red Wing . MN 55066 . U.S.A.  
Phone +1 651 212 6400 . usa@hydrocontrol-inc.com

**Walvoil Fluid Power Corporation**

4111 North Garnett Tulsa, OK 74116, USA  
TEL. 001 918 858 7100 . info@walvoilfluidpower.com

*1<sup>st</sup> edition D6.05*

[www.hydrocontrol-inc.com](http://www.hydrocontrol-inc.com)



D1WHEB04E

